

MW83YD

# เตาไมโครเวฟ

คำแนะนำสำหรับผู้ใช้และคู่มือการปรุงอาหาร

Planet  
First 100%  
Recycled Paper

คู่มือนี้พิมพ์จากกระดาษรีไซเคิล 100%

imagine the possibilities

ขอขอบคุณที่เลือกซื้อผลิตภัณฑ์ Samsung โปรดลงทะเบียนผลิตภัณฑ์ที่

 
[www.samsung.com/register](http://www.samsung.com/register)

SAMSUNG

## สารบัญ


เตาอบ .....	2
แผงควบคุม .....	3
อุปกรณ์เสริม .....	3
การใช้คู่มือฉบับนี้ .....	4
ข้อมูลสำคัญเพื่อความปลอดภัย .....	4
คำอธิบายสัญลักษณ์และไอคอน .....	4
ข้อควรระวังเพื่อหลีกเลี่ยงการได้รับพลังงานไมโครเวฟมากเกินไป .....	4
คำแนะนำสำคัญเพื่อความปลอดภัย .....	5
การติดตั้งเตาไมโครเวฟ .....	8
การตั้งเวลา .....	8
ควรทำอย่างไรเมื่อเกิดข้อสงสัยหรือมีปัญหา .....	9
การอบ/อุ่นอาหาร .....	9
ระดับพลังงาน .....	10
การใช้คุณสมบัติระบบกำจัดกลิ่น .....	10
การปรับเวลาปรุงอาหาร .....	10
การหยุดการปรุงอาหาร .....	10
การตั้งเวลาพัก .....	10
การใช้คุณสมบัติอาหารจานด่วน .....	11
การตั้งค่าอาหารจานด่วน+ .....	11
การใช้คุณสมบัติการหุงข้าว .....	12
การตั้งค่าการหุงข้าว .....	12
การใช้คุณสมบัติต้ม แกง .....	13
การตั้งค่า ต้ม แกง .....	13
การใช้คุณสมบัติเมนูอาหารไทย .....	14
การตั้งค่าเมนูอาหารไทย .....	14
การใช้คุณสมบัติละลายน้ำแข็งเร็วพิเศษ .....	15
การตั้งค่าการละลายน้ำแข็งเร็วพิเศษ .....	15
การปิดเสียงเตือน .....	16
การล็อคเตาไมโครเวฟ .....	16
คู่มือสำหรับอุปกรณ์การทำอาหาร .....	16
การทำความสะดวกเตาอบไมโครเวฟของคุณ .....	17
การเก็บรักษาและซ่อมเตาไมโครเวฟ .....	18
ข้อมูลจำเพาะด้านเทคนิค .....	18

## เตาอบ

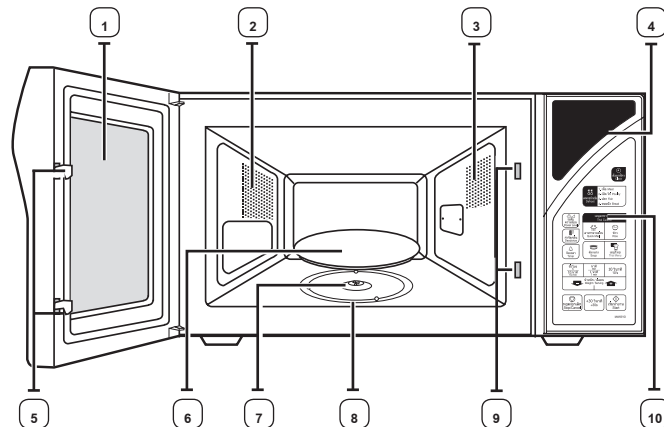

- |                   |                             |
|-------------------|-----------------------------|
| 1. ประตู          | 6. จานหมุน                  |
| 2. ช่องระบายอากาศ | 7. เฟืองของจานหมุน          |
| 3. ไฟ             | 8. วงแหวน                   |
| 4. จอแสดงผล       | 9. ช่องล็อคเพื่อความปลอดภัย |
| 5. สลักประตู      | 10. แผงควบคุม               |

## แผงควบคุม

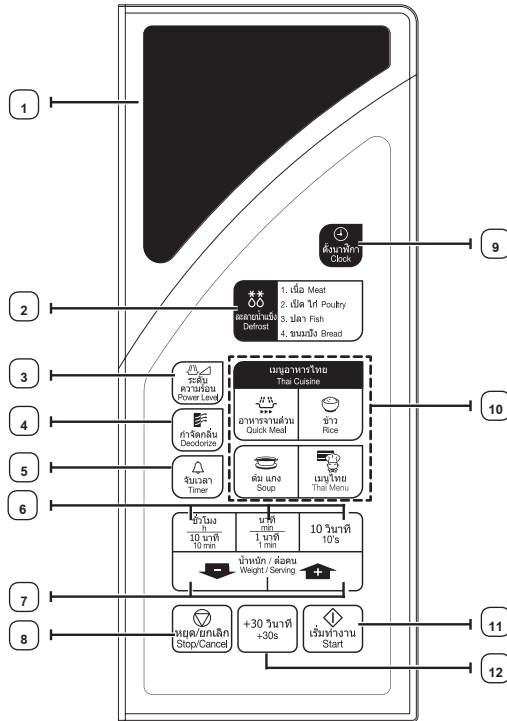 


- |                                 |                                       |
|---------------------------------|---------------------------------------|
| 1. จอแสดงผล                     | 7. ปุ่มขึ้น/ลง (น้ำหนัก, ปริมาณอาหาร) |
| 2. คุณสมบัตिलายน้ำแข็งเร็วพิเศษ | 8. ปุ่มหยุด/ยกเลิก                    |
| 3. การตั้งค่าระบบไมโครเวฟ       | 9. การตั้งเวลา                        |
| 4. ปุ่มกำจัดกลิ่น               | 10. ปุ่มเลือกเมนูอาหารไทย             |
| 5. การกำหนดเวลาพักอาหาร         | 11. ปุ่มเริ่มทำงาน/ +30 วินาที        |
| 6. การตั้งเวลา                  | 12. ปุ่ม +30 วินาที                   |

## อุปกรณ์เสริม

 คุณจะได้รับอุปกรณ์เสริมหลายชนิด เพื่อนำมาใช้ร่วมกับเตาอบ โดยขึ้นอยู่กับรุ่นที่คุณซื้อ

1. เฟือง ซึ่งวางไว้ตรงกับแกนของมอเตอร์ที่ส่วนฐานของเตาอบ

**วัตถุประสงค์:** เฟืองนี้จะเป็นตัวหมุนจานหมุน




2. วงแหวน เพื่อวางไว้บริเวณส่วนกลางของเตาอบ

**วัตถุประสงค์:** วงแหวนนี้จะรองรับน้ำหนักของจานหมุน



3. จานหมุน วางเหนือวงแหวน โดยให้ส่วนกลางสวมพอดีกับเฟือง

 **วัตถุประสงค์:** จานหมุนทำหน้าที่เป็นพื้นที่หลักสำหรับปรุงอาหาร และสามารถถอดออกทำความสะอาดได้ง่าย



 ห้ามใช้ไมโครเวฟหากไม่มีวงแหวน หรือจานหมุน

ไทย

## การใช้คู่มือฉบับนี้

ขอขอบคุณที่เลือกใช้เตาไมโครเวฟ SAMSUNG คำแนะนำสำหรับผู้ใช้นี้ประกอบด้วยข้อมูลที่เป็นประโยชน์มากมายเกี่ยวกับการใช้อาหารด้วยเตาไมโครเวฟของคุณ ดังนี้

- ข้อควรระวังเพื่อความปลอดภัย
- อุปกรณ์เสริมและภาชนะที่เหมาะสม
- เคล็ดลับที่เป็นประโยชน์ในการปรุงอาหาร
- เคล็ดลับในการปรุงอาหาร

## ข้อมูลสำคัญเพื่อความปลอดภัย

คำแนะนำสำคัญเพื่อความปลอดภัย

โปรดอ่านให้ละเอียด และเก็บไว้เป็นข้อมูลอ้างอิงในอนาคต  
ก่อนที่จะใช้เตาอบ โปรดปฏิบัติตามคำแนะนำต่อไปนี้

- ใช้อุปกรณ์นี้เพื่อวัตถุประสงค์ที่อธิบายในคู่มือคำแนะนำนี้เท่านั้น คำเตือนและคำแนะนำเพื่อความปลอดภัยในคู่มือนี้ไม่ได้ครอบคลุมถึงสภาวะและสถานการณ์ทั้งหมดที่สามารถเกิดขึ้นได้ คุณมีหน้าที่จะต้องใช้สามัญสำนึก ความระมัดระวัง และใส่ใจกับการติดตั้ง บำรุงรักษา และใช้งานอุปกรณ์
- เนื่องจากคำแนะนำในการใช้งานต่อไปนี้ใช้สำหรับหลายรุ่น ลักษณะของเตาอบของคุณอาจแตกต่างจากที่อธิบายในคู่มือนี้ และสัญญาณคำเตือนบางอย่างอาจไม่มีผล ถ้าคุณมีข้อซักถามหรือข้อกังวลใด โปรดติดต่อศูนย์บริการที่ใกล้ที่สุด หรือหาความช่วยเหลือและข้อมูลออนไลน์ได้ที่ [www.samsung.com](http://www.samsung.com)
- เตาไมโครเวฟนี้ใช้สำหรับการให้ความร้อนกับอาหาร ใช้สำหรับการใช้งานภายในครัวเรือนเท่านั้น ห้ามอุ่นผ้าทุกประเภทหรือเบาะที่มีไส้ซึ่งอาจลุกไหม้ได้ ผู้ผลิตไม่มีส่วนรับผิดชอบความเสียหายที่เกิดจากการใช้อุปกรณ์อย่างไม่ถูกต้องหรือไม่เหมาะสม
- การไม่รักษาความสะอาดเตาอบอาจทำให้เกิดความเสียหายกับพื้นผิว ซึ่งอาจมีผลเสียต่อเตาอบอย่างมาก และอาจก่อให้เกิดอันตรายได้

## คำอธิบายสัญลักษณ์และไอคอน



คำเตือน



ข้อควรระวัง



คำเตือน อันตรายจากไฟ



คำเตือน ไฟฟ้า



ห้ามทำ



ห้ามถอดประกอบ



ห้ามสัมผัส



ติดต่อศูนย์บริการเพื่อขอรับความช่วยเหลือ



ข้อมูลสำคัญ



คำเตือน พื้นผิวร้อน



คำเตือน วัตถุที่ระเบิดได้



ทำตามคำแนะนำอย่างเคร่งครัด



ถอดปลั๊กของเครื่องชั๊กจากเต้าเสียบที่ผนัง



ตรวจสอบว่าเครื่องมีการลงกราวด์เพื่อป้องกันไฟฟ้าช็อต



หมายเหตุ

## ข้อควรระวังเพื่อหลีกเลี่ยงการได้รับพลังงานไมโครเวฟมากเกินไป

หากไม่ปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยต่อไปนี้อาจทำให้ได้รับพลังงานไมโครเวฟที่เป็นอันตราย

- ห้ามใช้เตาปรุงอาหารขณะที่เปิดประตู หรือแก้ไขตัวแปลงลิ้นเพื่อความปลอดภัย (สลักประตู) หรือสอดสิ่งใดลงในช่องล็อก ไม่ว่าในกรณีใดๆ
- ห้ามสอดวัตถุใดๆ ระหว่างประตูของเตาอบกับด้านหน้า หรือปล่อยให้มือหรือเท้าหรือส่วนใดส่วนหนึ่งของร่างกายของคุณสัมผัสกับประตูและชิ้นของประตูสะอาดอยู่เสมอ โดยเช็ดด้วยผ้าหมาดและเช็ดอีกครั้งด้วยผ้าแห้งที่แห้งหลังจากการใช้งาน
- ห้ามใช้เตาอบที่มีความเสียหาย จนกว่าจะได้รับการซ่อมแซมโดยช่างผู้ชำนาญการซ่อมบำรุงไมโครเวฟที่ผ่านการฝึกอบรมโดยผู้ผลิต โปรดปิดประตูของเตาอบให้สนิท และตรวจสอบว่าส่วนต่างๆ ต่อไปนี้ไม่ชำรุดเสียหาย:
  - (1) ประตู (งอ)
  - (2) บานพับของประตู (หักหรือหลวม)
  - (3) ซิลประตูและผิวของซิล
- ห้ามปรับแกหรือซ่อมบำรุงเตาอบโดยบุคคลอื่นที่ไม่ใช่ช่างซ่อมบำรุงไมโครเวฟที่มีความชำนาญและได้รับการฝึกอบรมโดยผู้ผลิต



ผลิตภัณฑ์ที่เป็นอุปกรณ์ Group 2 Class B ISM คำนิยามของกลุ่ม 2 ซึ่งมีอุปกรณ์ ISM ทั้งหมด ซึ่งมีพลังงาน ความถี่วิทยุที่สร้างขึ้นและ/หรือใช้ในรูปของรังสีแม่เหล็กไฟฟ้า สำหรับการใช้กับวัสดุ และอุปกรณ์ EDM และอุปกรณ์ เชื่อมโลหะ สำหรับอุปกรณ์ Class B คืออุปกรณ์ที่เหมาะสมสำหรับการใช้งานในสถานที่พักอาศัย และในสถานที่ซึ่งเชื่อมต่อกับ เครือข่ายพลังงานแรงดันไฟฟ้าต่ำ ซึ่งจ่ายให้กับอาคารสิ่งปลูกสร้างสำหรับการใช้งานในครัวเรือน

## คำแนะนำสำคัญเพื่อความปลอดภัย

โปรดปฏิบัติตามข้อควรระวังเพื่อความปลอดภัยตลอดเวลา

⚠ คำเตือน	🔥	⚡	🔥	🔥
❌ ควรให้เจ้าหน้าที่ผู้มีความชำนาญเท่านั้นเป็นผู้แก้ไขหรือซ่อมแซมเตาไมโครเวฟ	✓	✓	✓	✓
❌ ห้ามให้ความร้อนของเหลวหรืออาหารอื่นในภาชนะที่ปิดผนึกแน่น	✓	✓	✓	✓
❌ เพื่อความปลอดภัย ห้ามใช้เครื่องทำความร้อนด้วยแรงดันน้ำหรือเครื่องทำความร้อนด้วยเครื่องฉีดไอน้ำ	✓	✓	✓	✓
❌ ห้ามติดตั้งอุปกรณ์นี้ใกล้เครื่องทำความร้อน วัตถุไวไฟ ความชื้น ตำแหน่งที่มีน้ำมันหรือฝุ่นละอองมาก ในตำแหน่งที่ได้รับแสงแดดโดยตรงหรือได้รับน้ำ หรือในที่ซึ่งอาจมีก๊าซรั่ว หรือในพื้นที่ไม่เรียบ	✓	✓	✓	✓
🔌 อุปกรณ์นี้ต้องการลงกราวด์อย่างเหมาะสมตามข้อกำหนดของท้องถิ่นหรือของประเทศ	✓	✓	✓	✓
★ นำสิ่งแปลกปลอมทั้งหมด เช่น ฝุ่นละอองหรือน้ำออกจากช่องข้อปลั๊กไฟและหน้าสัมผัสเป็นประจำ โดยใช้ผ้าแห้ง	✓	✓	✓	✓
❌ ห้ามดึงหรือบิดงอหรือวางสิ่งของทับสายไฟ	✓	✓	✓	✓
★ ถ้ามิกาชั่ว (เช่น ก๊าซไฟพรุน ก๊าซหุงต้ม ฯลฯ) ให้ระบายอากาศทันที โดยไม่สัมผัสกับปลั๊กไฟ	✓	✓	✓	✓
🚫 ห้ามสัมผัสปลั๊กไฟด้วยมือที่เปียก	✓	✓	✓	✓
❌ ห้ามปิดเครื่องด้วยการถอดปลั๊กไฟ ขณะที่เครื่องกำลังทำงานอยู่	✓	✓	✓	✓
🔌 ห้ามสอดนิ้วหรือสิ่งแปลกปลอม ถ้ามี่สิ่งแปลกปลอมหรือน้ำเข้าเครื่อง ให้ถอดปลั๊กไฟและติดต่อศูนย์บริการที่อยู่ใกล้ที่สุด	✓	✓	✓	✓

❌ ห้ามใช้แรงกดหรือกระแทกอุปกรณ์	✓	✓	✓	✓
❌ อย่าวางอุปกรณ์ไวบนวัตถุที่เปราะบางเช่นชิ่งหรือกระจก (รุ่นสำหรับวางบนเคาเตอร์เท่านั้น)	✓	✓		
❌ ห้ามใช้เบนซิน ทินเนอร์ แอลกอฮอล์ เครื่องทำความร้อนด้วยไอน้ำหรือเครื่องฉีดน้ำแรงดันสูงเพื่อทำความสะอาดอุปกรณ์	✓	✓	✓	✓
❌ ตรวจสอบว่าแรงดันไฟฟ้า ความถี่ และกระแสไฟฟ้าตรงกับข้อมูลจำเพาะของผลิตภัณฑ์	✓	✓	✓	✓
❌ ต่อสายไฟเข้ากับเต้ารับไฟฟ้าที่ผืนอย่างแน่นหนา ห้ามใช้ตัวแปลงปลั๊ก สายต่อ หรือหม้อแปลงไฟฟ้า	✓	✓	✓	
❌ ห้ามเกี่ยวสายไฟกับวัตถุที่เป็นโลหะ ใต้สายไฟไว้ระหว่างวัตถุหรือหลังเตาอบ	✓	✓	✓	
❌ ห้ามใช้ปลั๊กไฟที่เสียหาย สายไฟ หรือเต้ารับไฟฟ้าที่เสียหาย หลวม เมื่อปลั๊กไฟหรือสายไฟเสียหาย โปรดติดต่อศูนย์บริการใกล้บ้านคุณ	✓	✓	✓	✓
❌ อุปกรณ์นี้ไม่ได้ออกแบบมาเพื่อใช้งานด้วยเครื่องจับเวลาภายนอกหรือระบบรีโมทคอนโทรลแยกต่างหาก	✓	✓		
❌ ห้ามฉีดพ่นน้ำมันเตาอบ	✓	✓		
❌ ห้ามวางสิ่งของบนเตาอบ ภายในหรือบนประตูเตาอบ	✓	✓	✓	
❌ ห้ามพันสายระเหยเช่นยาฆ่าแมลงบนพื้นผิวผลิตภัณฑ์โดยตรง	✓	✓		
★ โปรดดูแลมิให้เด็กเล่นกับอุปกรณ์นี้	✓	✓	✓	✓
❌ อุปกรณ์นี้ไม่ได้ออกแบบมาสำหรับการติดตั้งในยานพาหนะบนท้องถนน คาราวาน และยานพาหนะในลักษณะเดียวกัน	✓	✓	✓	✓
❌ โปรดอย่าเก็บวัตถุที่ติดไฟได้ไว้ในเตาอบ ใช้ความระมัดระวังเมื่อให้ความร้อนอาหารหรือเครื่องดื่มที่มีแอลกอฮอล์ เนื่องจากไอของแอลกอฮอล์อาจสัมผัสกับส่วนที่ร้อนจัดของเตาอบ	✓		✓	✓

<input type="checkbox"/>	เตาไมโครเวฟที่ออกแบบมาสำหรับใช้งานบนเคาเตอร์เท่านั้น ไม่ควรวางเตาไมโครเวฟไว้ในช่องของตู้ (รุ่นสำหรับวางบนเคาเตอร์เท่านั้น)	✓	✓	✓	✓
<input checked="" type="checkbox"/>	คำเตือน: อุปกรณ์นี้และชิ้นส่วนที่เข้าถึงได้อาจร้อนจัดระหว่างการใช้งาน โปรดใช้ความระมัดระวังอย่าสัมผัสตลอดความร้อนภายในเตาอบ ห้ามเด็กอายุต่ำกว่า 8 ขวบใช้อุปกรณ์ ยกเว้นกรณีที่มีผู้ดูแลใกล้ชิด	✓	✓	✓	✓
<input checked="" type="checkbox"/>	คำเตือน: ไม่ควรให้เด็กใช้เครื่องไมโครเวฟตามลำพัง ยกเว้นกรณีที่เด็กได้รับคำแนะนำเพียงพอที่จะใช้เตาไมโครเวฟอย่างปลอดภัย และทราบถึงอันตรายจากการใช้ผิดวิธี	✓	✓	✓	✓
<input checked="" type="checkbox"/>	อุปกรณ์นี้สามารถใช้งานโดยเด็กที่มีอายุ 8 ปีขึ้นไปและบุคคลที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตใจไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ถ้าได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล ห้ามเด็กเล่นกับอุปกรณ์นี้ ห้ามเด็กทำความสะอาดหรือบำรุงรักษาอุปกรณ์โดยไม่มีการดูแล	✓	✓	✓	✓
<input type="checkbox"/>	คำเตือน: ห้ามใช้เตาอบหากประตูหรือช่องขอบประตูเสียหาย จนกว่าจะได้รับการซ่อมแซมจากช่างผู้ชำนาญ	✓	✓	✓	✓
<input type="checkbox"/>	คำเตือน: อาจเกิดอันตรายขึ้นได้ หากให้บุคคลที่ไม่ใช่ช่างที่มีความชำนาญเป็นผู้ซ่อมบำรุง ซึ่งต้องมีการถอดฝาครอบของเครื่อง ซึ่งเป็นเครื่องป้องกันพลังงานไมโครเวฟ	✓	✓	✓	✓
<input type="checkbox"/>	คำเตือน: ตรวจสอบว่าปิดอุปกรณ์แล้ว ก่อนที่จะเปลี่ยนหลอดไฟ เพื่อป้องกันไฟฟ้าช็อต	✓	✓	✓	✓
<input type="checkbox"/>	คำเตือน: โปรดอย่าอุ่นของเหลวและอาหารอื่นในภาชนะที่ปิดสนิท เนื่องจากอาจจะระเบิดได้	✓	✓	✓	✓
<input type="checkbox"/>	คำเตือน: ชิ้นส่วนที่เข้าถึงได้อาจร้อนจัดหลังจากการใช้งาน เพื่อหลีกเลี่ยงการร่อนลวก โปรดอย่าให้เด็กเล็กเข้าใกล้	✓	✓	✓	✓
<input checked="" type="checkbox"/>	คำเตือน: ระหว่างการอุ่นหรือเครื่องต้มด้วยไมโครเวฟ จะมีการเตือนที่ลำโพงออกไป ดังนั้น โปรดใช้ความระมัดระวังเมื่อถือภาชนะ เพื่อป้องกันสถานการณ์นี้ โปรดพักอาหารอย่างน้อย 20 วินาที หลังจากปิดเตาอบ เพื่อให้อุณหภูมิกระจายตัวอย่างสม่ำเสมอทุกครั้ง คนอาหารระหว่างให้ความร้อนถ้าจำเป็น และคนทุกครั้ง หลังจากอุ่น ในกรณีที่ร้อนของเหลวลวก โปรดปฏิบัติตามคำแนะนำในการปฐมพยาบาล: <ul style="list-style-type: none"> <li>• แช่บริเวณที่ถูกลวกในน้ำเย็นเป็นเวลาอย่างน้อย 10 นาที</li> <li>• พันด้วยผ้าพันแผลที่แห้งและสะอาด</li> <li>• โปรดอย่าทาครีม น้ำมัน หรือโลชั่น</li> </ul>	✓	✓	✓	✓
<input checked="" type="checkbox"/>	ระหว่างการใช้งานอุปกรณ์จะมีความร้อนสูง โปรดใช้ความระมัดระวังอย่าสัมผัสตลอดความร้อนภายในเตาอบ	✓	✓	✓	✓

<input checked="" type="checkbox"/>	คำเตือน: ควรคนหรือเขย่าสิ่งที่บรรจุอยู่ในขวดนมเด็กและขวดอาหารเด็ก และตรวจสอบอุณหภูมิก่อนที่จะรับประทาน เพื่อลดความเสี่ยงของการลวก	✓	✓	✓	✓
<input checked="" type="checkbox"/>	อุปกรณ์นี้ไม่เหมาะสำหรับบุคคล (รวมถึงเด็ก) ที่มีสมรรถภาพร่างกาย ประสาทสัมผัส หรือสภาพจิตใจไม่เป็นปกติ หรือขาดประสบการณ์หรือความรู้ ยกเว้นจะได้รับการดูแลหรือได้รับคำแนะนำในการใช้งานโดยบุคคลที่รับหน้าที่ดูแล	✓	✓	✓	✓
<input checked="" type="checkbox"/>	เตาอบนี้ควรอยู่ในตำแหน่งและความสูงที่เหมาะสม เพื่อให้สามารถเข้าถึงส่วนภายในเตาอบและบริเวณควบคุมได้ง่าย	✓	✓	✓	✓
<input checked="" type="checkbox"/>	ก่อนที่จะใช้เตาอบเป็นครั้งแรก ควรใช้งานเตาอบกับน้ำเป็นเวลา 10 นาที จากนั้นจึงค่อยใช้	✓	✓	✓	✓
<input checked="" type="checkbox"/>	เตาไมโครเวฟนี้จะตั้งอยู่ในตำแหน่งที่คุณสามารถเอื้อมถึงปลั๊กได้ง่าย ถ้าอุปกรณ์มีเสียงผิดปกติ มีควันหรือกลิ่นไหม้ ให้ถอดปลั๊กทันที และติดต่อศูนย์บริการใกล้บ้าน	✓	✓	✓	✓
<input type="checkbox"/>	ระหว่างการทำความสะอาด พื้นผิวอาจร้อนกว่าปกติ และควรระวังอย่าให้เด็กอยู่ใกล้เตียง (รุ่นที่มีฟังก์ชันทำความสะอาดเท่านั้น)	✓	✓	✓	✓
<input type="checkbox"/>	ต้องจัดเศษอาหารที่หกค้างอยู่ ก่อนที่จะทำความสะอาด และควรระบุว่าสามารถใส่เครื่องใช้ใดไว้ในเตาอบระหว่างการทำความสะอาดได้ (เฉพาะรุ่นที่มีการทำความสะอาด)	✓	✓	✓	✓
<input checked="" type="checkbox"/>	อุปกรณ์นี้ควรจะสามารถถอดสายไฟออกได้ง่ายหลังจากที่ติดตั้งแล้ว สามารถดำเนินการถอดอุปกรณ์ออกจากแหล่งจ่ายไฟด้วยการทำให้ปลั๊กอยู่ในตำแหน่งที่เอื้อมถึง หรือใช้สวิตช์กับการเดินสายคงที่ตามกฎหมายของการเดินสาย (เฉพาะรุ่นที่ทำงานในตู้เท่านั้น)	✓	✓	✓	✓

 
⚠️ ข้อควรระวัง		🔥	⚡	🔥	🔥
★	โปรดใช้เฉพาะภาชนะที่เหมาะสมกับเตาไมโครเวฟเท่านั้น ห้ามใช้ภาชนะที่เป็นโลหะ จานที่มีขอบทองหรือเงิน เหล็กเสียบ ส้อม ฯลฯ น้ำลวดที่ใช้มัดปากถุงออกจากถุง กระดาษหรือถุงพลาสติกก่อน นำลวดที่ใช้ปิดถุงออกจากถุงกระดาษหรือถุงพลาสติกก่อน สาเหตุ: อาจมีประกายไฟเกิดขึ้น ซึ่งทำให้เตาไมโครเวฟเสียหาย	✓		✓	✓
★	เมื่ออุ่นอาหารในภาชนะพลาสติก โปรดระวังว่าอาจจะมีการติดไฟขึ้นในเตาอบ	✓		✓	
⊘	ห้ามใช้เตาไมโครเวฟเพื่อทำให้น้ำแข็งละลายหรือละลาย	✓		✓	✓
★	ใช้เวลาสั้นลงสำหรับอาหารปริมาณน้อย เพื่อป้องกันอาหารร้อนเกินไปและไหม้	✓		✓	✓
🔧	ถ้าพบว่ามีความผิดปกติหรือกดปุ่มผิดปกติ กรุณาอย่าเปิดประตูเตาอบ เพื่อมิให้ เกิดเปลวไฟ	✓		✓	✓
★	ทำความสะอาดและจัดอาหารตากอย่างสม่ำเสมอ	✓	✓		✓
⊘	ห้ามจุ่มสายไฟหรือปลั๊กในน้ำ และระวังอย่าให้สายไฟอยู่ใกล้พื้นผิวที่ร้อน	✓	✓		
⊘	ห้ามอุ่นร้อนหรือให้ความร้อนกับไข่ทั้งเปลือกหรือไข่ต้มในเตาไมโครเวฟ เนื่องจาก อาจจะระเบิดได้ แม้ว่าจีสันสุดการให้ความร้อนของไมโครเวฟแล้วก็ตาม นอกจากนี้ นี้ยังอาจให้ความร้อนหรือภาชนะที่ปิดฝาสนิทหรือเป็นสุญญากาศ ถั่วที่มีเปลือก มะเขือเทศ ฯลฯ			✓	✓
⊘	ห้ามปิดหรือบังช่องระบายอากาศด้านหลังของเตาด้วยผ้าหรือกระดาษ ผ้าหรือ กระดาษอาจติดไฟ ขณะที่มีการระบายอากาศออกจากเตา เตาอบอาจมี ความร้อนสูงเกินไป และตัดการทำงานโดยอัตโนมัติ และจะไม่สามารถใช้งานได้ จนกว่าจะเย็นลง	✓		✓	
🚫	ทุกครั้ง จะต้องใช้ถุงมือกันความร้อนขณะนำอาหารออกจากเตาเพื่อป้องกันความ ร้อนลวก			✓	
🚫	ห้ามสัมผัสวัสดุลดความร้อนหรือผนังด้านในของเตาอบจนกว่าจะเย็นลงเสียก่อน			✓	

★	คนของเหลวเมื่อถึงครึ่งหนึ่งของเวลาอุ่น หรือหลังจากสิ้นสุดการอุ่นร้อน และพัก ให้ของเหลวเย็นลงอย่างน้อย 20 วินาทีหลังจากให้ความร้อนเพื่อป้องกันการเดือด และกระเด็น		✓	
★	ยืนห่างจากเตาอบประมาณหนึ่งช่วงแขนเมื่อเปิดประตู เพื่อป้องกันไอน้ำหรือ อากาศร้อนลวก		✓	
⊘	ห้ามใช้งานไมโครเวฟเมื่อไม่มีอาหารอยู่ภายในเตา เตาไมโครเวฟจะปิดลงโดยอัตโนมัติ หลังจากผ่านไป 30 นาทีเพื่อความปลอดภัย ขอแนะนำให้วางแก้วน้ำไว้ในเตาอบ ตลอดเวลา เพื่อดูดซับพลังงานไมโครเวฟในกรณีที่เตาไมโครเวฟทำงานโดยไม่ตั้งใจ	✓		✓
⊘	ห้ามใช้สารทำความสะอาดที่มีฤทธิ์กัดกร่อนหรือที่กัดโลหะเพื่อทำความสะอาดประตู เตาอบ เนื่องจากจะทำให้พื้นผิวเป็นรอยและทำให้แก้วแตกได้	✓		✓
★	ติดตั้งเตาอบตามระยะห่างที่กำหนดในคู่มือนี้ (ดูที่ การติดตั้งเตาไมโครเวฟ)	✓	✓	
★	ใช้ความระมัดระวังเมื่อต่ออุปกรณ์ไฟฟ้าเข้ากับเตาเสียบปลั๊กเตาอบ	✓	✓	✓


## การติดตั้งเตาไมโครเวฟ

วางเตาไว้บนพื้นผิวที่เรียบและได้ระดับ 85 ซม. เหนือพื้น พื้นผิวควรมีความแข็งแรงเพียงพอที่จะรับน้ำหนักของเตาได้อย่างปลอดภัย


1. เมื่อคุณติดตั้งเตาอบ โปรดจัดวางให้มีการระบายอากาศที่เพียงพอ โดยเว้นช่องว่างอย่างน้อย 10 ซม. (4 นิ้ว) ที่ด้านหลังและด้านข้างของเตาอบ และเว้นที่ 20 ซม. (8 นิ้ว) ด้านบนของเตาอบ

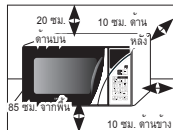

 
2. นำวัสดุที่เป็นบรรจุภัณฑ์ภายในเตาอบออก ติดตั้งวงแหวนและจานหมุน และตรวจสอบว่าสามารถหมุนได้อย่างอิสระ

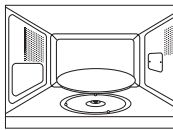

3. เตาไมโครเวฟนี้จะต้องอยู่ในตำแหน่งที่คุณสามารถเอื้อมถึงปลั๊กได้อย่างง่าย


 กรณีที่สายไฟของเครื่องใช้ไฟฟ้านี้เกิดเสียหาย ต้องใช้สายไฟหรือชุดสายไฟเฉพาะที่มีให้จากผู้ผลิตหรือตัวแทนผู้ให้บริการ เพื่อความปลอดภัยของคุณ โปรดต่อสายไฟของเตาไมโครเวฟกับเตาเลียสามขา 230 โวลต์ 50 เฮิร์ตซ์ ที่มีการลงกราวด์ ถ้าสายไฟของเครื่องใช้นี้เสียหาย จะต้องเปลี่ยนทดแทนด้วยสายไฟพิเศษ

 ห้าม ติดตั้งเตาไมโครเวฟในบริเวณที่มีความร้อนและความชื้นสูง เช่น ถัดจากเตาอบธรรมดาหรือเครื่องทำความร้อน โปรดปฏิบัติตามข้อกำหนดการจ่ายไฟของเตาอบ และหากจะใส่สายต่อ จะต้องใช้สายที่เป็นมาตรฐานเดียวกับสายไฟของเตาอบ เช็ดด้านในของซีลประตูด้วยผ้าหมาด ก่อนที่จะใช้เตาไมโครเวฟเป็นครั้งแรก

## การตั้งเวลา

เตาไมโครเวฟของคุณมีนาฬิกาอยู่ภายใน เมื่อมีการจ่ายไฟ "12:00" จะปรากฏบนหน้าจอแสดงผลโดยอัตโนมัติ โปรดตั้งเวลาปัจจุบัน ซึ่งสามารถแสดงเวลาในระบบ 12 หรือ 24 ชั่วโมง คุณจะต้องตั้งเวลาของนาฬิกา:

- เมื่อติดตั้งเตาไมโครเวฟเป็นครั้งแรก
- หลังจากไฟฟ้าดับ

 
 อย่าลืมปรับเวลา ถ้าคุณต้องสลับระหว่างเวลาของฤดูร้อนและฤดูหนาว

1. ถ้าต้องการแสดงเวลาในรูปแบบ... ให้กดปุ่ม **ตั้งนาฬิกา** (⌚) ...

เวลาแบบ 24 ชั่วโมง                      หนึ่งครั้ง  
เวลาแบบ 12 ชั่วโมง                      สองครั้ง



2. ตั้งค่าชั่วโมงด้วยปุ่ม **ชั่วโมง** และนาฬิกาด้วยปุ่ม **นาฬิกา**



3. เมื่อนาฬิกาแสดงเวลาถูกต้องแล้ว ให้กดปุ่ม **ตั้งนาฬิกา** (⌚) อีกครั้งเพื่อให้นาฬิกาเริ่มเดิน

**ผลลัพธ์:** เวลานี้จะปรากฏเมื่อใดก็ตามที่คุณไม่ได้ใช้เตาไมโครเวฟ



## ควรทำอะไรเมื่อเกิดข้อสงสัยหรือมีปัญหา

ถ้าคุณประสบปัญหาอย่างใดอย่างหนึ่งที่ปรากฏด้านล่าง โปรดลองใช้วิธีแก้ไขปัญหานั้นให้มากที่สุด

### ซึ่งเป็นอาการปกติ

- เกิดไอน้ำเกาะตัวในเตาอบ
- มีอากาศหม่นเวียนใกล้ประตูและด้านนอกของเตาอบ
- มีแสงสะท้อนใกล้ประตูและด้านนอกของเตาอบ
- มีไอน้ำออกมาจากข้างประตูหรือช่องระบายอากาศ

### เตาอบไม่เริ่มทำงานเมื่อปิดปุ่ม เริ่มทำงาน (🔼)

- ประตูปิดเรียบร้อยแล้วหรือไม่

### อาหารไม่สุกเลย

- คุณกำหนดเวลาถูกต้อง และกดปุ่ม เริ่มทำงาน เริ่มทำงาน (🔼) แล้วหรือไม่
- ประตูปิดเรียบร้อยแล้วหรือไม่
- มีการใช้ไฟเกินในวงจรไฟฟ้าของบ้าน และทำให้ฟิวส์ขาดหรือทำให้เครื่องตัดไฟฟ้าทำงานหรือไม่

### อาหารสุกเกินไปหรือไม่สุกพอ

- คุณใช้ระยะเวลาในการปรุงอาหารเหมาะสมกับชนิดของอาหารหรือไม่
- ระดับพลังงานที่เลือกถูกต้องหรือไม่

### มีประกายไฟหรือเสียงแตกเกิดขึ้นภายในเตาอบ (เกิดประกายไฟ)

- คุณใช้จานที่มีขอบโลหะหรือไม่
- คุณลืมส้อมหรือเครื่องใช้ในครัวที่เป็นโลหะไว้ในเตาอบหรือไม่
- แผ่นฟอยล์อะลูมิเนียมใกล้กับผนังด้านในของเตาอบหรือไม่

### เตาอบทำให้เกิดสัญญาณรบกวนวิทยุหรือโทรทัศน์

- คุณอาจพบสัญญาณรบกวนโทรทัศน์หรือวิทยุบ้างเล็กน้อย เมื่อเตาอบทำงาน ซึ่งเป็นอาการปกติ นี่เป็นการปกติในการแก้ไขปัญหานี้ โปรดติดตั้งเตาไมโครเวฟให้ห่างจากเครื่องรับโทรทัศน์ วิทยุ และเสาอากาศ
- ถ้าไมโครโปรเซสเซอร์ของเตาอบพบสัญญาณรบกวน อาจจะมีการรีเซ็ตจอแสดงผล ในการแก้ปัญหานี้ ให้ถอดปลั๊กและต่อใหม่อีกครั้ง ตั้งเวลาใหม่

- 🔍 ถ้าคำแนะนำข้างต้นไม่สามารถแก้ไขปัญหาของคุณได้ โปรดติดต่อตัวแทนจำหน่ายหรือฝ่ายบริการหลังการขายของ SAMSUNG

## การอบ/อุ่นอาหาร

ขั้นตอนต่อไปนี้จะกล่าวถึงการอบและการอุ่นอาหาร

โปรดตรวจสอบการตั้งค่าการปรุงอาหารทุกครั้ง ก่อนที่จะปล่อยให้เตาอบทำงานตามค่าฟังก์ชันแรก วางอาหารที่ส่วนกลางของจานหมุน และปิดประตู

### 1. กดปุ่ม ระดับความร้อน (🔼)

**ผลลัพธ์:** สัญญาณ 850 W (ระดับพลังงานการปรุงอาหารสูงสุด) จะปรากฏ:  
เลือกระดับพลังงานที่เหมาะสมด้วยการกดปุ่ม ระดับความร้อน (🔼) อีกครั้งจนกระทั่งได้ระดับพลังงานที่ต้องการ โปรดดูตารางในหน้าถัดไป



### 2. กำหนดเวลาในการปรุงอาหาร โดยกดปุ่ม 10 นาที, 1 นาที และ 10 วินาที ตามต้องการ

ช่วงเวลา	นาที	10 วินาที
10 นาที	1 นาที	10s
10 min	1 min	

### 3. กดปุ่ม เริ่มทำงาน (🔼)

**ผลลัพธ์:** ไฟของเตาอบจะสว่างขึ้น และจานหมุนจะเริ่มหมุน การอบอาหารจะเริ่มขึ้น และเมื่อเสร็จแล้ว เตาอบจะส่งเสียงเตือนสี่ครั้ง




- 🔍 ห้ามเปิดเครื่อง หากเตาอบว่างเปล่า

- 🔍 หากคุณต้องการอุ่นอาหารเป็นเวลาสั้นๆ โดยใช้พลังงานสูงสุด (850 W) คุณสามารถกดปุ่ม +30s หนึ่งครั้งต่อเวลาการอบ 30 วินาที เตาอบจะทำงานทันที

## ระดับพลังงาน

คุณสามารถเลือกระดับพลังงานต่อไปนี้

ระดับพลังงาน	กำลังไฟฟ้า
สูง	850 วัตต์
สูงปานกลาง	600 วัตต์
ปานกลาง	450 วัตต์
ต่ำปานกลาง	300 วัตต์
ละลายน้ำแข็ง (❄️)	180 วัตต์
ต่ำ	100 วัตต์

 ถ้าคุณเลือกระดับพลังงานสูง จะต้องลดระยะเวลาในการปรุงอาหาร ถ้าคุณเลือกระดับพลังงานต่ำ จะต้องใช้ระยะเวลาในการปรุงอาหารมากขึ้น

## การใช้คุณสมบัติระบบกำจัดกลิ่น

คุณสามารถใช้คุณสมบัตินี้หลังจากการปรุงอาหารที่มีกลิ่นแรง หรือเมื่อมีควันมากภายในเตา

กดปุ่ม **กำจัดกลิ่น**  หลังจากที่คุณทำความสะอาดเสร็จแล้ว คุณจะได้ยินเสียงสัญญาณสี่ครั้ง

 เวลาในการจัดกลิ่นตั้งไว้ที่ 5 นาที คุณสามารถเพิ่มได้ครั้งละ 30 นาที เมื่อกดปุ่ม **+30 วินาที**

 เวลาในการกำจัดกลิ่นสูงสุดคือ 15 นาที

## การปรับเวลาปรุงอาหาร

คุณสามารถเพิ่มเวลาในการปรุงอาหาร โดยกดปุ่ม **+30 วินาที** หนึ่งครั้งสำหรับการเพิ่ม 30 วินาที

กดปุ่ม **30 วินาที** หนึ่งครั้งสำหรับการเพิ่มเวลา 30 วินาที

 
**+30 วินาที**  
**+30s**

## การหยุดการปรุงอาหาร

คุณสามารถหยุดปรุงอาหารเมื่อใดก็ได้ เพื่อตรวจสอบอาหาร

1. ในการหยุดชั่วคราว  
ให้เปิดประตู

**ผลลัพธ์:** การอบจะหยุดลง ในการอบอาหารต่อ ให้เปิดประตูและกดปุ่ม **เริ่มทำงาน** (▶️) อีกครั้ง



2. ในการหยุดการบันทึก  
ให้กดปุ่ม **หยุด/ยกเลิก** (⏏️)

**ผลลัพธ์:** การปรุงอาหารจะหยุดลง หากคุณต้องการยกเลิกการตั้งค่าการอบ ให้กดปุ่ม **หยุด/ยกเลิก** (⏏️) อีกครั้ง



 คุณสามารถยกเลิกการตั้งค่าก่อนที่จะเริ่มต้นการปรุงอาหารด้วยการกดปุ่ม **หยุด/ยกเลิก** (⏏️)

## การตั้งเวลาพัก

คุณสามารถกำหนดเวลาหยุดพักเพื่อพักอาหารโดยอัตโนมัติ (โดยที่ไม่โครเวฟไม่ทำงาน)

 
1. กดปุ่ม **Hold Timer** (ตั้งเวลาพัก)

เปิดประตู

**ผลลัพธ์:** หน้าจอจะแสดงผลดังนี้:



2. กำหนดเวลาในการปรุงอาหาร โดยกดปุ่ม **10 นาที**, **1 นาที** และ **10 วินาที** ตามต้องการ



3. กดปุ่ม **เริ่มทำงาน**

**ผลลัพธ์:** 1) เต้าปอบจะส่งเสียงเตือนสี่ครั้ง  
2) เวลาปัจจุบันจะปรากฏอีกครั้ง



## การใช้คุณสมบัติอาหารจานด่วน

สำหรับคุณสมบัติอาหารจานด่วน การกำหนดเวลาปรุงอาหารจะทำได้โดยอัตโนมัติขั้นแรก วางอาหารที่ส่วนกลางของจานหมุน และปิดประตู

### 1. กดปุ่ม Quick meal (อาหารจานด่วน)



### 2. เลือกประเภทอาหารที่ต้องการ โดยกดปุ่ม Quick meal (อาหารจานด่วน) โปรดดูตารางในหน้าถัดไป เพื่อดูคำอธิบายการตั้งค่าต่างๆ



### 3. กดปุ่ม เริ่มทำงาน (Start)

ผลลัพธ์:

- เตาอบจะอบอาหารตามการตั้งค่าล่วงหน้าที่คุณเลือกไว้
- เมื่อการอบอาหารเสร็จสิ้น เตาอบจะส่งเสียงและแสดงสัญลักษณ์ "0" กะพริบสีครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาฬิกาครั้ง



## การตั้งค่าอาหารจานด่วน+

ตารางต่อไปนี้เป็นตารางโปรแกรมอาหารจานด่วนต่างๆ รวมทั้งปริมาณ เวลาพักอาหาร และคำแนะนำ

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ
1	บะหมี่สำเร็จรูป	670 ก.	หมูสับ - 100 ก., ไข่ - 1, ผัก - 100 ก., บะหมี่สำเร็จรูป - 1 ซอง, น้ำมัน - 2 ถ้วย
			คำแนะนำ
			1. ใส่บะหมี่สำเร็จรูป หมูสับ ผัก และไข่รวมกันและปรุง
2	ขนมจีบกุ้งแช่แข็ง	192 ก. (16 ชิ้น)	ขนมจีบกุ้งแช่แข็ง - 192 ก.
			คำแนะนำ
			1. ตัดมุมของช่องและปรุง

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ
3	ซาลาเปาไส้หมูสับแช่แข็ง	180 ก. (30 ชิ้น)	ซาลาเปาไส้หมูสับแช่แข็ง
			คำแนะนำ
			1. ตัดมุมของช่องและปรุง
4	เกี๊ยวกุ้งแช่แข็ง	250 ก.	เกี๊ยวกุ้งแช่แข็ง - 250 ก.
			คำแนะนำ
			1. นำถุงด้านนอกออกก่อนอุ่น 2. เจาะฟิล์มให้เป็นรู 3-4 ครั้งและปรุง
5	ข้าวต้มปลาเก๋าแช่แข็ง	350 ก.	ข้าวต้มปลาเก๋าแช่แข็ง - 350 ก.
			คำแนะนำ
			1. นำถุงด้านนอกออกก่อนอุ่น 2. เปิดฝา เติมน้ำตามขีดที่ระบุ 3. ปิดฝาให้แน่นไว้เพื่อให้อาหารไอน้ำออกได้ระหว่างให้ความร้อนและปรุงอาหาร
6	สปาเก็ตตี้ซอสไก่แช่แข็ง	450 ก.	สปาเก็ตตี้ซอสไก่แช่แข็ง - 450 ก.
			คำแนะนำ
			1. นำถุงด้านนอกออกก่อนอุ่น 2. เจาะฟิล์มให้เป็นรู 3-4 ครั้งและปรุง

### การใช้คุณสมบัติการหุงข้าว

เมื่อใช้คุณสมบัติ ข้าว เครื่องจะกำหนดเวลาในการปรุงอาหารโดยอัตโนมัติ  
ขั้นแรก วางอาหารที่ส่วนกลางของจานหมุน และปิดประตู

#### 1. กดปุ่ม ข้าว



2. เลือกประเภทอาหารที่ต้องการ โดยกดปุ่ม ข้าว โปรดดูตารางในหน้าถัดไป เพื่อดูคำ  
อธิบายการตั้งค่าต่างๆ



#### 3. กดปุ่ม เริ่มทำงาน (▶)

##### ผลลัพธ์:

เตาอบจะอบอาหารตามการตั้งค่าล่วงหน้าที่คุณเลือกไว้

- เมื่อการอบอาหารเสร็จสิ้น เตาอบจะส่งเสียงและแสดงสัญลักษณ์ "0" กะพริบสีกรีน หลังจากนั้นเตาอบจะส่งเสียงเตือนนาฬิกาครั้ง



### การตั้งค่าการหุงข้าว

ตารางต่อไปนี้เป็นตารางการตั้งโปรแกรมข้าวแบบต่างๆ รวมทั้งปริมาณ เวลาพักอาหาร และคำแนะนำต่างๆ

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ
1	ข้าว	320 ก.	ข้าว - 1 ถ้วย, น้ำ - 1 1/4 ถ้วย
			คำแนะนำ
			1. เติมน้ำในถ้วยและปิดฝา 2. หุงและปิดฝาไว้เป็นเวลา 15-20 นาทีก่อนรับประทาน
2	ข้าวกล้อง	350 ก.	ข้าวกล้อง - 1 ถ้วย, น้ำสำหรับหุง - 2 ถ้วย, น้ำสำหรับล้างข้าว
			คำแนะนำ
			1. เติมน้ำในถ้วยและปิดฝา 2. หุงและรอ 10 นาทีก่อนเสิร์ฟ

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ
3	ข้าวเหนียว	350 - 400 ก.	ข้าวเหนียว - 1 ถ้วย, น้ำ - 1/2 ถ้วย
			คำแนะนำ
			1. เติมน้ำในถ้วยและปิดฝา 2. หุงและปิดฝาไว้เป็นเวลา 15-20 นาทีก่อนรับประทาน
4	ข้าวต้ม/โจ๊กหมู	600-750 กรัม	ข้าวสวย - 1 ถ้วย, น้ำ - 500 มล., หมูสับ - 1/2 ถ้วย, พริกไทยป่น - 1 ช้อนชา, ซีอิ๊ว - 1 ช้อนโต๊ะ, น้ำมันหอย - 1 ช้อนโต๊ะ, ต้นหอม, ต้นข่า, ผักชี - 1/2 ถ้วย
			คำแนะนำ
			1. นำหมูสับมาคลุกพริกไทย น้ำมันหอยและปั้นเป็นก้อนกลม 2. ใส่หมูก่อน ข้าวสวย น้ำ และปรุงรสด้วยผงปรุงรสหมู คนให้เข้ากันและปรุง 3. โรยต้นหอม ต้นข่า ผักชีก่อนเสิร์ฟ
5	สปาเก็ตตี้	220 ก.	สปาเก็ตตี้ - 80 ก. น้ำร้อน - 500 มล.
			คำแนะนำ
			1. เติมน้ำในถ้วยและคนให้เข้ากัน ใส่สปาเก็ตตี้และปรุง 2. เทน้ำทิ้งและแช่น้ำเย็น เติมน้ำมันพืชและคน
6	ข้าวเหนียวมูล	410 ก.	ข้าวเหนียวสุก - 1 ถ้วย, กระทิ - 1/3, เกลือ - 1 ช้อนชา, น้ำตาล - 1 ช้อนโต๊ะ
			คำแนะนำ
			1. ผสมกระทิกับน้ำตาลและเกลือ คนให้เข้ากันและปรุง จากนั้นพัก 1 นาที 2. ใส่ข้าวเหนียวสุกในถ้วย 3. เทน้ำกระทิในถ้วยข้าวเหนียวสุก และคนให้ทั่ว ปิดฝาเป็นเวลา 10 นาที จากนั้นเสิร์ฟกับมะม่วงสุกหรือสังขยา



## การใช้คุณสมบัติต้ม แกง

สำหรับคุณสมบัติต้ม แกง การกำหนดเวลาปรุงอาหารจะกระทำโดยอัตโนมัติ  
ขั้นแรก วางอาหารที่ส่วนกลางของจานหมุน และปิดประตู

### 1. กดปุ่ม ต้ม แกง



### 2. เลือกประเภทอาหารที่คุณปรุงด้วยการกดปุ่ม ต้ม แกง โปรดดูตารางในหน้าถัดไป เพื่อดูคำอธิบายการตั้งค่าต่างๆ



### 3. กดปุ่ม เริ่มทำงาน (▶)

#### ผลลัพธ์:

- เตาอบจะอบอาหารตามการตั้งค่าลงหน้าที่เลือกไว้
- เมื่อการอบอาหารเสร็จสิ้น เตาอบจะส่งเสียงและแสดงสัญลักษณ์ "0" กะพริบสีครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาฬิกาครั้ง



## การตั้งค่า ต้ม แกง

ตารางต่อไปนี้เป็นการตั้งโปรแกรม ต้ม แกง แบบต่างๆ รวมทั้งปริมาณ เวลาพักอาหาร และคำแนะนำต่างๆ

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ
1	แกงจืดเต้าหู้สาหร่าย	850 ก.	หมูสับ - 100 ก., พริกไทย - ¼ ช้อนชา, ต้นหอม - ¼ ถ้วย, ผักชี - 1 ช้อนโต๊ะ, น้ำ - 500 มล., น้ำปลา - 1 ช้อนโต๊ะ, เต้าหู้หลอด - 2, สาหร่ายทะเลแห้ง - ¼ ถ้วย, น้ำมันหอย - 1 ช้อนโต๊ะ, พริกไทย - 1 ช้อนชา
			คำแนะนำ
			1. หมักหมูกับพริกไทยเป็นเวลา 5 นาที 2. เติมน้ำ หมูสับ เต้าหู้อ่อน และปรุง 3. เติมน้ำมันหอย ผักชี และพริกไทย สาหร่ายทะเล พร้อมเสิร์ฟ

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ
2	ต้มยำกุ้ง	920 ก.	กุ้ง - 150 ก., ข่าผ่าแนบๆ - 4 แว่น, ใบมะกรูด - ¼ ถ้วย, ตะไคร้ - 2, น้ำต้ม - 500 มล., เติบ - 1 ถ้วย, มะเขือเทศ - 4, พริกเผา - 1 ช้อนโต๊ะ, เนยขมิ้น - ¼ ถ้วย, น้ำปลา - 3 ช้อนโต๊ะ, น้ำมันหอย - 3 ช้อนโต๊ะ, พริก - 10 เม็ด
			คำแนะนำ
			1. ใส่ข่า ตะไคร้ ผักใบมะกรูด มะเขือเทศ น้ำพริกเผาในน้ำร้อนและรอ 2 นาที 2. เติมน้ำ เติบ พริก และปรุง 3. จากนั้นเติมน้ำมันหอย ปรุงรสด้วยน้ำปลา น้ำมันหอย พริก และเสิร์ฟขณะร้อน
3	กล้วยบัวคั่ว	500 - 600 กรัม	กล้วยหั่นเป็นแว่น - 100 ก., กระเทียม - 150 มล., น้ำตาลปึก - 3 ช้อนโต๊ะ, น้ำตาล - 1 ถ้วย (240 มล.), เกลือ - ¼ ช้อนชา
			คำแนะนำ
			1. ผสมกระเทียม น้ำ น้ำตาลปึก และเกลือ คนให้เข้ากัน จากนั้นเติมน้ำกล้วย 2. ปรุง

การใช้คุณสมบัติเมนูอาหารไทย

สำหรับคุณสมบัติเมนูอาหารไทย การกำหนดเวลาปรุงอาหารจะทำได้โดยอัตโนมัติ  
ขั้นแรก วางอาหารที่ส่วนกลางของจานหมุน และปิดประตู

1. กดปุ่ม เมนูอาหารไทย



2. เลือกประเภทอาหารที่คุณปรุงด้วยการกดปุ่ม **เมนูอาหารไทย** ไปรูดดูตารางในหน้าถัดไป เพื่อดูคำอธิบายการตั้งค่าต่างๆ



3. กดปุ่ม เริ่มทำงาน (▶)

**ผลลัพธ์:**

- เตาอบจะอบอาหารตามการตั้งค่าล่วงหน้าที่คุณเลือกไว้
- เมื่อการอบอาหารเสร็จสิ้น เตาอบจะส่งเสียงและแสดงสัญลักษณ์ "0" กระพริบสีครั้ง หลังจากนั้นเตาอบจะส่งเสียงเตือนนาฬิกาครั้ง



การตั้งค่าเมนูอาหารไทย


ตารางต่อไปนี้เป็นการตั้งโปรแกรม เมนูอาหารไทย แบบต่างๆ รวมทั้งปริมาณ เวลาพักอาหาร และคำแนะนำต่างๆ

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ
1	ไข่ตุ๋น (คัสตาร์ดไข่)	400-450 ก.	ไข่สด - 2, นมข้นจืด - 2 ช้อนโต๊ะ, น้ำ - 3/4 ถ้วย, ซอสถั่วเหลืองแบบญี่ปุ่น - 1 ช้อนชา, เกลือ - 1/8 ช้อนชา, ปูอัด - 1/4 ถ้วย, กุ้งต้ม - 4
			คำแนะนำ
			1. ใส่ไข่ในถ้วย ตีและเติมนมข้นจืด น้ำและปรุงรสด้วยซอสถั่วเหลือง เติมน้ำมันและตีให้เข้ากัน 2. ปรุงและตกแต่งด้วยปูอัดและกุ้งก่อนเสิร์ฟ

รหัส	อาหาร	ปริมาณอาหาร	ส่วนประกอบ
2	ไข่เขียว	120 ก.	ไข่ท - 2, มะเขือเทศสับ - 1 ช้อนโต๊ะ, หัวหอมสับ - 1 ช้อนโต๊ะ, ซอส - ½ ช้อนโต๊ะ, เนย - 1 ช้อนโต๊ะ
			คำแนะนำ
			1. ผสมไข่ มะเขือเทศ หัวหอมสับและซอส จากนั้นคนให้เข้ากัน 2. ทาเนยบนจาน ใส่ส่วนผสมบนจานและปรุง
3	สปาเก็ตตี้ครีมซอส	450 - 500 กรัม	หัวหอม - 1/4 ถ้วย, น้ำ - ½ ถ้วย, แอมลวาก - ½ ถ้วย, สปาเก็ตตี้สด - 80 ก., เนยเค็ม - 2 ช้อนโต๊ะ, เบยลิฟ - 3, แป้ง - 1 ช้อนโต๊ะ, วิกครีม - 100 มล., เติตผ่านเป็นแวน - 1/2 ถ้วย, เกลือ, พริกไทย - 1/4 ช้อนชา, มอซซาเรลล่าชีส - 2 ช้อนโต๊ะ
			คำแนะนำ
			1. ผสมน้ำและแป้ง จากนั้นเติมนม วิกครีม เบยลิฟ หัวหอมสับ แอม เติต ปรุงรสด้วยพริกไทยและเกลือ 2. ปรุงและเติมนมมอซซาเรลล่าชีส คนและเสิร์ฟพร้อมสปาเก็ตตี้
4	สปาเก็ตตี้มีทบอล	500 - 550 กรัม	สปาเก็ตตี้สด - 80 ก., เกลือ - 1/2 ช้อนชา, เนื้อสับ - 200 ก., พริกไทยดำ - ½ ช้อนชา, หัวหอมสับ - ¼ ถ้วย, เบยลิฟ - 3, เนย - 2 ช้อนโต๊ะ, มะเขือเทศหั่นลูกเต๋า - 1 ถ้วย, ซอสมะเขือเทศ - 1/4 ถ้วย, น้ำ - 1/3 ถ้วย
			คำแนะนำ
			1. ผสมเนื้อสับกับพริกไทย และคนให้เข้ากันและปั้นเป็นก้อน 2. ผสมมีทบอล เนย เบยลิฟ และมะเขือเทศ ซอสมะเขือเทศ หัวหอมสับ น้ำ 3 ปรุงและเสิร์ฟพร้อมสปาเก็ตตี้
5	สังขยามะพร้าว	130 ก.	ไข่เป็ด - 3, น้ำตาล - ½ ถ้วย, กระทิ - 1 ถ้วย, ใบเตย - 2-3, พักทองหั่นลูกเต๋า - 1 ถ้วย
			คำแนะนำ
			1. ผสมไข่และคนให้เข้ากันน้ำจากใบเตย จนโลกกลิ่นหอมใบเตย จากนั้นคนให้เข้ากันน้ำตาล เติมน้ำมะพร้าว 2. เติมน้ำพักทอง จากนั้นปรุงร ึ่งให้เย็นแล้วเสิร์ฟ

## การใช้คุณสมบัติละลายน้ำแข็งเร็วพิเศษ

คุณสมบัติการละลายน้ำแข็งอัตโนมัติช่วยให้คุณละลายเนื้อ ไก่ หรือปลาที่แช่แข็งไว้ได้ เวลาและระดับพลังงานจะถูกกำหนดโดยอัตโนมัติ

 โปรดใช้กับผลิตภัณฑ์ที่ระบุว่าใช้กับไมโครเวฟได้เท่านั้น

ขั้นแรก ให้วางอาหารแช่แข็งไว้กึ่งกลางจานหมุน และปิดประตู

1. เลือกประเภทอาหารที่ปรุง โดยกดปุ่ม **ละลายน้ำแข็ง (〰)** ตามจำนวนที่เหมาะสม (โปรดดูรายละเอียดในตารางในหน้าถัดไป)



2. เลือกน้ำหนักอาหาร โดยกดปุ่ม **ขึ้น/ลง** คุณสามารถกำหนดน้ำหนักอาหารสูงสุด 2000 กรัม




3. กดปุ่ม **เริ่มทำงาน (◇)**

**ผลลัพธ์:**





- การละลายน้ำแข็งจะเริ่มขึ้น
- เมื่อละลายน้ำแข็งเสร็จครั้งหนึ่ง เตาอบจะส่งเสียงเตือนให้ทราบว่า你需要กลับอาหาร
- กดปุ่ม **เริ่มทำงาน (◇)** อีกครั้ง เพื่อละลายน้ำแข็งจนเสร็จ



 คุณสามารถละลายน้ำแข็งโดยกำหนดค่าเองได้เช่นกัน โดยเลือกการทำงานแบบไมโครเวฟ/อุ่นอาหาร และใช้ระดับพลังงาน 180 วัตต์ โปรดดูรายละเอียดเพิ่มเติมในหัวข้อ "การอบ/อุ่นอาหาร" ในหน้า 9

## การตั้งค่าการละลายน้ำแข็งเร็วพิเศษ

ตารางต่อไปนี้เป็นารตั้งโปรแกรมละลายน้ำแข็งเร็วพิเศษต่างๆ รวมทั้งปริมาณ เวลาพักอาหาร และคำแนะนำต่างๆ โปรดนำอาหารออกจากบรรจุภัณฑ์ก่อนที่จะละลายน้ำแข็ง วางเนื้อ ไก่ ปลา และขนมปัง/เค้กในจานกระเบื้อง

รหัส/อาหาร	สัดส่วน	เวลาพัก	คำแนะนำ
1. เนื้อ 	200-2000 ก.	20-60 นาที	หุ้มส่วนขอบด้วยฟอยล์อะลูมิเนียม กลับเนื้อเมื่อได้ยินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับเนื้อ แกะ หมู สเต็ก เนื้อเป็นชิ้น เนื้อสัตว์
2. เปิดไก่ 	200-2000 ก.	20-60 นาที	หุ้มขาและปลายปีกด้วยฟอยล์อะลูมิเนียม กลับเมื่อได้ยินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับไก่ทั้งตัว หรือไก่ที่หั่นเป็นชิ้น
3. ปลา 	200-2000 ก.	20-50 นาที	หุ้มส่วนหางของปลาที่ยังไม่หั่นด้วยฟอยล์อะลูมิเนียม กลับเมื่อได้ยินเสียงจากเตาอบ โปรแกรมนี้เหมาะสำหรับปลาทั้งตัว หรือปลาชิ้น
4. ขนมปัง 	100-1000 ก.	5-20 นาที	วางขนมปังบนกระดาษสำหรับเตาอบ และพลิกกลับด้านเมื่อได้ยินเสียงสัญญาณจากเตาอบ วางเค้กบนจานกระเบื้อง และพลิกกลับด้านเมื่อได้ยินเสียงสัญญาณจากเตาอบ (เตาอบจะทำงานต่อไปและจะหยุดเมื่อคุณเปิดประตู) โปรแกรมนี้เหมาะสำหรับขนมปังทุกประเภท ไม่ว่าจะเป็นแบบตัดหรือหั่นก่อน เช่นเดียวกับขนมปังก่อนและแบ่งแบบฝรั่งเศส วางก่อนขนมปังเป็นวงกลม โปรแกรมนี้เหมาะกับบิสต์เค้ก บิสต์เค้ก ชีสเค้ก และฟัพทุกประเภท แต่ไม่เหมาะสำหรับขนมเพสทรีแบบชอคหรือคริสต์ เค้กผลไม้หรือครีม รวมทั้งเค้กราดช็อกโกแลต

## การปิดเสียงเตือน

คุณสามารถปิดเสียงเตือนของเตาอบได้ตามต้องการ

- กดปุ่ม หยุด/ยกเลิก และ เริ่มทำงาน พร้อมกัน

ผลลัพธ์:

- เตาอบจะไม่ส่งเสียงในครั้งถัดไปที่คุณกดปุ่ม

OFF

 


- ถ้าต้องการเปิดเสียงเตือนอีกครั้ง ให้กดปุ่ม หยุด/ยกเลิก และ เริ่มทำงาน พร้อมกันอีกครั้ง

ผลลัพธ์:

- เตาอบจะทำงานโดยมีเสียงเตือนอีกครั้ง

On



## การล็อกเตาไมโครเวฟ

เตาไมโครเวฟของคุณมีโปรแกรมป้องกันเพื่อความปลอดภัยของเด็ก ซึ่งจะ "ล็อก" เตาอบไม่ให้เด็กหรือบุคคลที่ไม่คุ้นเคยสามารถใช้เตาอบได้

คุณสามารถล็อกเตาอบเมื่อใดก็ได้ตามต้องการ

- กดปุ่ม หยุด/ยกเลิก และ ตั้งนาฬิกา พร้อมกัน

ผลลัพธ์:

- เตาอบจะถูกล็อก (ไม่สามารถเลือกฟังก์ชันใดได้)

L



- ถ้าต้องการเปิดเสียงเตือนอีกครั้ง ให้กดปุ่ม หยุด/ยกเลิก และ ตั้งนาฬิกา พร้อมกันอีกครั้ง

ผลลัพธ์:

คุณสามารถใช้เตาอบได้ตามปกติ



## คู่มือสำหรับอุปกรณ์การทำอาหาร

ในการปรุงอาหารด้วยเตาไมโครเวฟ คลื่นไมโครเวฟจะต้องสามารถแทรกเข้าสู่อาหาร โดยไม่มีการสะท้อนหรือดูดซับโดยภาชนะ

คุณจึงควรเลือกใช้อุปกรณ์อย่างรอบคอบ คุณควรเลือกภาชนะที่มีข้อความหรือเครื่องหมายว่าใช้กับไมโครเวฟได้ ตราต่อไปนี้แสดงอุปกรณ์การทำอาหารประเภทต่างๆ และระบุว่าจะสามารถใช้กับเตาไมโครเวฟได้หรือไม่ และอย่างไร

อุปกรณ์	ใช้กับไมโครเวฟได้	หมายเหตุ
ฟอยล์อะลูมิเนียม	✓ X	สามารถใช้จำนวนเล็กน้อย เพื่อป้องกันส่วนที่ไม่ต้องการให้สุกเกินไป อาจมีประกายไฟ ถ้าฟอยล์อยู่ใกล้กับผนังของเตาอบมากเกินไป หรือใช้ฟอยล์มากเกินไป
จานสำหรับทำเกรียม	✓	ห้ามอุ่นร้อนเกินกว่าแปดนาที
กระเบื้องและดินเผา	✓	กระเบื้องพอร์ซเลน ดินเผา ดินเผาเคลือบ และกระเบื้องเคลือบนั้นมักจะใช้ได้ดี ยกเว้นที่มีขอบโลหะ
จานโฟมหรือกระดาษแบบใช้แล้วทิ้ง	✓	อาหารแช่แข็งบางชนิดจะบรรจุในภาชนะประเภทนี้
บรรจุภัณฑ์ของอาหารจานด่วน		
• ถ้วยโฟม	✓	สามารถใช้อุ่นอาหาร ความร้อนสูงมากจะ ทำให้โฟมละลาย
• ถุงกระดาษหรือหนังสือพิมพ์	X	อาจติดไฟ
• กระดาษรีไซเคิลหรือขอบโลหะ	X	อาจเกิดประกายไฟ
เครื่องแก้ว		
• ภาชนะสำหรับเตาอบและใส่อาหาร	✓	ใช้ได้ หากไม่ประดับด้วยขอบโลหะ
• เครื่องแก้วบาง	✓	สามารถใช้อุ่นอาหารหรือของเหลว แก้วที่บางมากอาจแตกหรือร้าวหากได้รับความร้อนทันที
• โถแก้ว	✓	ต้องใช้โดยไม่ปิดฝา เหมาะสำหรับการอุ่นอาหารเท่านั้น

อุปกรณ์	ใช้กับไมโครเวฟได้	หมายเหตุ
โลหะ		
• จาน	X	อาจเกิดประกายไฟหรือติดไฟ
• ลวดสำหรับมัดปากถุงแช่แข็ง	X	
กระดาษ		
• จาน ถ้วย กระดาษเช็ดปาก และกระดาษเช็ดมือ	✓	สำหรับการอบเวลาสั้นๆ และการอุ่นอาหาร และใช้ซับของเหลวที่มากเกินไป
• กระดาษรีไซเคิล	X	อาจเกิดประกายไฟ
พลาสติก		
• ภาชนะ	✓	โดยเฉพาะพลาสติกทนความร้อน พลาสติกชนิดอื่นอาจบิดหรือเปลี่ยนสีเมื่อโดนความร้อนสูง ห้ามใช้พลาสติกแบบเมลามีน
• ฟิล์มสำหรับปิดอาหาร	✓	สามารถใช้เก็บรักษาความชื้น ไม่ควรสัมผัสกับอาหารโดยตรง ใช้ความระมัดระวังขณะนำฟิล์มออก เนื่องจากอาจมีไอร้อนออกมาด้วย
• ถุงแช่แข็ง	✓ X	เฉพาะชนิดที่คมได้หรือใช้กับเตาอบได้ ไม่ควรเป็นแบบกักอากาศ ซึ่งต้องใช้ลมแฉะก่อน ถ้าจำเป็นต้องใช้
กระดาษมันหรือกระดาษไข	✓	สามารถใช้เก็บรักษาความชื้นหรือกันอาหารกระเด็น

- ✓ : แนะนำ  
✓X : ใช้อย่างระมัดระวัง  
X : ไม่ปลอดภัย

## การทำความสะอาดเตาอบไมโครเวฟของคุณ

โปรดทำความสะอาดส่วนต่อไปนี้ในเตาไมโครเวฟเป็นประจำ เพื่อไม่ให้ไหม้ไขมันและเศษอาหารเกาะ:

- ผิวหน้าด้านในและด้านนอก
- ประตูและซีลขอบประตู
- จานหมุนและวงแหวน



ตรวจสอบว่าซีลประตูสะอาดและประตูสามารถปิดได้อย่างเหมาะสม



การไม่รักษาความสะอาดเตาอบอาจทำให้เกิดความเสียหายกับพื้นผิว ซึ่งอาจมีผลเสียต่ออย่างมาก และอาจก่อให้เกิดอันตรายได้

1. ทำความสะอาดพื้นผิวด้านนอกด้วยผ้านุ่ม ชูบน้ำอุ่นผสมน้ำยาล้างจาน ล้างให้สะอาดและเช็ดให้แห้ง
2. จัดการอาหารที่กระเด็นบนพื้นผิวด้านในของเตาอบหรือวงแหวนด้วยผ้าชุบน้ำยาล้างจาน ล้างให้สะอาดและเช็ดให้แห้ง
3. เพื่อให้เศษอาหารที่แห้งแข็งหลุดออกง่ายขึ้น และขจัดกลิ่นไม่พึงประสงค์ ให้วางถ้วยน้ำมะนาวผสมน้ำบนจานหมุน และให้ความร้อนโดยใช้พลังงานเต็มที่เป็นเวลาสิบนาที
4. ล้างจานที่ใช้เครื่องล้างได้เมื่อใดก็ตามที่ต้องการ



โปรดอย่าทำน้ำหกในช่องระบาย ห้ามใช้ผลิตภัณฑ์ที่มีฤทธิ์กัดกร่อน หรือสารละลายเคมี โปรดใช้ความระมัดระวังขณะทำความสะอาดซีลขอบประตู เพื่อให้แน่ใจว่าไม่มีเศษอาหารติดอยู่


- สะสม
- ทำให้ประตูปิดไม่สนิท

## การเก็บรักษาและซ่อมเตาไมโครเวฟ


โปรดทราบข้อควรระวังต่อไปนี้ เมื่อเก็บรักษาหรือนำเตาไมโครเวฟไปซ่อมแซม ห้ามใช้เตาอบ หากประตูหรือซีลขอบประตูเสียหาย

- บานพับเสียหาย
- ซีลมีความเสียหาย
- โครงภายนอกของเตาอบบิดหรืออ

โปรดใช้บริการซ่อมบำรุงโดยช่างผู้ชำนาญการซ่อมไมโครเวฟเท่านั้น

 ห้ามถอดโครงภายนอกของเตาอบ หากเตาไมโครเวฟทำงานไม่ถูกต้อง หรือต้องมีการบำรุงรักษา หรือหากคุณมีข้อสงสัย

- ถอดสายไฟออกจากปลั๊กที่ผนัง
- ติดต่อศูนย์บริการหลังการขายที่อยู่ใกล้

 หากคุณต้องการเก็บเตาอบไว้ชั่วคราว โปรดเก็บไว้ในที่แห้งและไม่มีฝุ่นละออง  
สาเหตุ: ฝุ่นละอองและความชื้นอาจมีผลเสียต่อส่วนประกอบของเตาอบ

 เตาไมโครเวฟนี้ไม่เหมาะสำหรับใช้งานเพื่อการพาณิชย์

## ข้อมูลจำเพาะด้านเทคนิค

SAMSUNG มุ่งมั่นที่จะพัฒนาผลิตภัณฑ์อยู่เสมอ ดังนั้นรายละเอียดของเครื่องและคำแนะนำสำหรับผู้ใช้นี้จึงอาจมีการเปลี่ยนแปลง โดยไม่ได้แจ้งให้ทราบ

รุ่น	MW83YD
การจ่ายไฟ	220 V ~ 50 Hz
การใช้พลังงานไมโครเวฟ	1250 วัตต์
กำลังไฟฟ้า	100 วัตต์ / 850 วัตต์ (IEC-705)
ความถี่ของคลื่นขณะทำงาน	2450 MHz
แมกนีตรอน	OM75P(31)
วิธีระบายความร้อน	มอเตอร์พัดลมระบายความร้อน
ขนาด (กว้าง x สูง x ลึก) ด้านนอก ช่องของเตาอบ	489 x 275 x 371 มม. 330 x 211 x 329 มม.
ปริมาตร	23 ลิตร
น้ำหนักสุทธิ	13.5 กก. โดยประมาณ

หมายเหตุ

หมายเหตุ

ไทย



## QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300-362-603	www.samsung.com
NEW ZEALAND	0800-SAMSUNG (0800-726-786)	
CHINA	400-810-5858	
HONG KONG	(852) 3698-4698	www.samsung.com/hk www.samsung.com/hk_en/
INDIA	3030-8282 1800-3000-8282	www.samsung.com
INDONESIA	0800-112-8888 021-5699-7777	
JAPAN	0120-327-527	
MALAYSIA	1800-88-9999	
PHILIPPINES	1-800-10-SAMSUNG (726-7864) 1-800-3-SAMSUNG (726-7864) 1-800-8-SAMSUNG (726-7864) 02-5805777	
SINGAPORE	1800-SAMSUNG(726-7864)	
THAILAND	1800-29-3232 02-689-3232	
TAIWAN	0800-329-999	
VIETNAM	1-800-588-889	





MW83YD

 
# Microwave Oven

## Owner's Instructions & Cooking Guide

imagine the possibilities

Thank you for purchasing this Samsung product.  
Please register your product at

[www.samsung.com/register](http://www.samsung.com/register)




This manual is made with 100% recycled paper.



# CONTENTS

 Oven .....	2
Control panel .....	3
Accessories .....	3
Using this instruction booklet .....	4
Important safety information .....	4
Legend for symbols and icons .....	4
Precaution to avoid possible exposure to excessive microwave energy .....	4
Important safety instructions .....	5
Installing your microwave oven .....	8
Setting the time .....	8
What to do if you are in doubt or have a problem .....	9
Cooking/Reheating .....	9
Power levels .....	10
Using the deodorization feature .....	10
Adjusting the cooking time .....	10
Stopping the cooking .....	10
Setting a standing time .....	10
Using the quick meal feature .....	11
Quick meal settings .....	11
Using the rice feature .....	12
The rice settings .....	12
Using the soup feature .....	13
The soup settings .....	13
Using the Thai menu feature .....	14
The thai menu settings .....	14
Using the auto rapid defrost feature .....	15
Auto rapid defrost settings .....	15
Switching the beeper off .....	16
Safety-locking your microwave oven .....	16
Cookware guide .....	16
Cleaning your microwave oven .....	17
Storing and repairing your microwave oven .....	18
Technical specifications .....	18


# OVEN

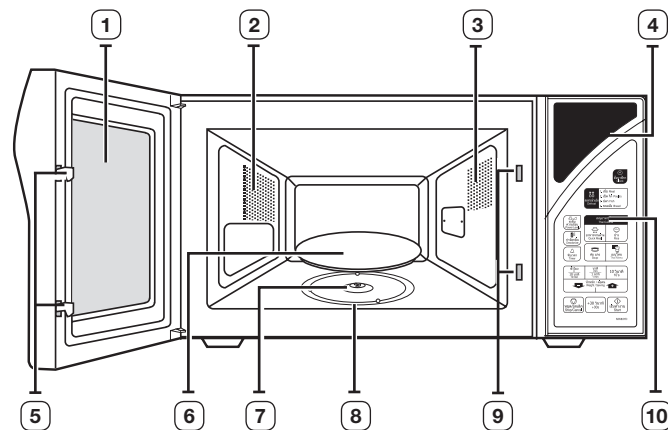

- |                      |                           |
|----------------------|---------------------------|
| 1. DOOR              | 6. TURNTABLE              |
| 2. VENTILATION HOLES | 7. COUPLER                |
| 3. LIGHT             | 8. ROLLER RING            |
| 4. DISPLAY           | 9. SAFETY INTERLOCK HOLES |
| 5. DOOR LATCHES      | 10. CONTROL PANEL         |



## CONTROL PANEL

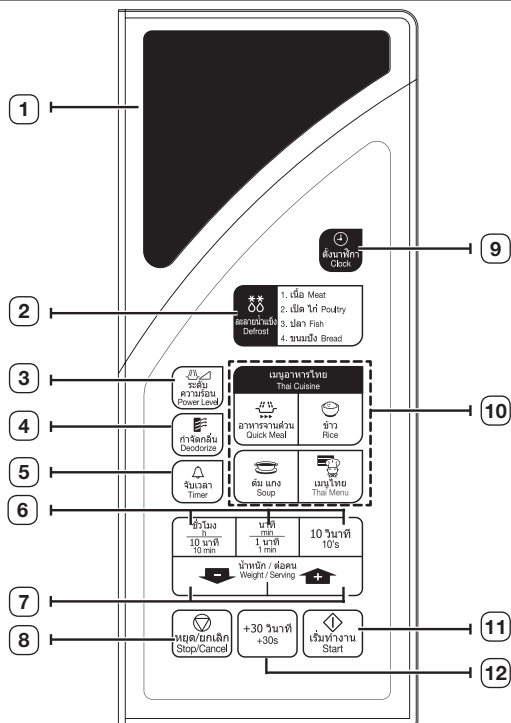 


- |                               |  |
|-------------------------------|--|
| 1. DISPLAY                    | 7. UP / DOWN BUTTON (Weight, Serving size) |
| 2. AUTO RAPID DEFROST FEATURE | 8. STOP/CANCEL BUTTON                      |
| 3. POWER LEVEL SETTING        | 9. CLOCK SETTING                           |
| 4. DEODORIZATION BUTTON       | 10. THAI CUISINE FEATURE SELECTION         |
| 5. STANDING TIME SETTING      | 11. START BUTTON                           |
| 6. TIME SETTING               | 12. +30s BUTTON                            |

## ACCESSORIES

 Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.

- 1. Coupler**, already placed over the motor shaft in the base of the oven.

**Purpose :** The coupler rotates the turntable.




- 2. Roller ring**, to be placed in the centre of the oven.


**Purpose :** The roller ring supports the turntable.



- 3. Turntable**, to be placed on the roller ring with the centre fitting to the coupler.

 **Purpose :** The turntable serves as the main cooking surface; it can be easily removed for cleaning.



-  **DO NOT** operate the microwave oven without the roller ring and turntable.

## USING THIS INSTRUCTION BOOKLET

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contain valuable information on cooking with your microwave oven:

- Safety precautions
- Suitable accessories and cookware
- Useful cooking tips
- Cooking tips

## IMPORTANT SAFETY INFORMATION

**Important safety instructions.**

**READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.**

**Before using the oven, confirm that the following instructions are followed.**

- Use this appliance only for its intended purpose as described in this instruction manual. Warnings and Important safety instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.
- Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at [www.samsung.com](http://www.samsung.com).
- This microwave oven is supposed for heating food. It is intended for domestic home-use only. Do not heat any type of textiles or cushions filled with grains, which could cause burns and fire. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the appliance.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possible result in a hazardous situation.

## LEGEND FOR SYMBOLS AND ICONS



**WARNING**

Hazards or unsafe practices that may result in **severe personal injury or death**.



**CAUTION**

Hazards or unsafe practices that may result in **minor personal injury or property damage**.



Warning; Fire hazard



Warning; Hot surface



Warning; Electricity



Warning; Explosive material



Do NOT attempt.



Follow directions explicitly.



Do NOT disassemble.



Unplug the power plug from the wall socket.



Do NOT touch.



Make sure the machine is grounded to prevent electric shock.



Call the service center for help.



Note



Important

## PRECAUTION TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.
- Do NOT place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.
- Do NOT operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:































- (1) Door (bent)
- (2) Door hinges (broken or loose)
- (3) Door seals and sealing surfaces
- (d) The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

This product is a Group 2 Class B ISM equipment. The definition of group 2 which contains all ISM equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and EDM and arc welding equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.

## IMPORTANT SAFETY INSTRUCTIONS

Make sure that these safety precautions are obeyed at all times.

 <b>WARNING</b>					
 Only qualified staff should be allowed to modify or repair the microwave oven.	✓	✓	✓	✓	✓
 Do not heat liquids and other food in sealed containers.	✓	✓	✓	✓	✓
 For your safety, do not use high-pressure water cleaners or steam jet cleaners.	✓	✓	✓	✓	✓
 Do not install this appliance; near heater, inflammable material; in a humid, oily or dusty location, in a location exposed to direct sunlight and water or where gas may leak; on un level ground.	✓	✓	✓	✓	✓
 This appliance must be properly grounded in accordance with local and national codes.	✓	✓	✓	✓	✓
 Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.	✓	✓	✓	✓	✓
 Do not pull or excessively bend or place heavy object on the power cord.	✓	✓	✓	✓	✓

 In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug.	✓	✓	✓	✓
 Do not touch the power plug with wet hands.	✓	✓	✓	✓
 Do not turn the appliance off by unplugging the power plug while an operation is in progress.	✓	✓	✓	✓
 Do not insert fingers or foreign substances, If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.	✓	✓	✓	✓
 Do not apply excessive pressure or impact to the appliance.	✓	✓	✓	✓
 Do not place the oven over a fragile object such as a sink or glass object. (Counter top model only)	✓	✓		
 Do not use benzene, thinner, alcohol, steam cleaner or high pressure cleaner to clean the appliance.	✓	✓	✓	✓
 Ensure that the power voltage, frequency and current are the same as those of the product specifications.	✓	✓		✓
 Plug the power plug into the wall socket firmly. Do not use a multiple plug adapter, an extension cord or an electric transformer.	✓	✓	✓	
 Do not hook the power cord on a metal object, insert the power cord between the objects or behind the oven.	✓	✓	✓	
 Do not use a damaged power plug, damaged power cord or loose wall socket. When the power plug or power cord is damaged, contact your nearest service centre.	✓	✓	✓	✓
 Appliances are not intended to be operated by means of an external timer or separate remote-control system.	✓	✓		
 Do not pour or directly spray water onto the oven.	✓	✓		
 Do not place objects on the oven, inside or on the door of the oven.	✓	✓	✓	
 Do not spray volatile material such as insecticide onto the surface of the oven.	✓	✓		
 Children should be supervised to ensure that they do not play with the appliance	✓	✓	✓	✓

<input type="checkbox"/>	The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.	✓	✓	✓	✓
<input type="checkbox"/>	Do not store flammable materials in the oven. Take special care when heating dishes or drinks that contain alcohol as alcohol vapours may contact a hot part of the oven.	✓		✓	✓
<input type="checkbox"/>	The microwave oven is intended to be used on the counter or counter top use only, the microwave oven shall not be placed in a cabinet. (Counter top model only)	✓	✓	✓	✓
★	<b>WARNING:</b> The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.	✓	✓	✓	✓
★	<b>WARNING:</b> Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.	✓	✓	✓	✓
★	This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.	✓	✓	✓	✓
<input type="checkbox"/>	<b>WARNING:</b> If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.	✓	✓	✓	✓
<input type="checkbox"/>	<b>WARNING:</b> It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.	✓	✓	✓	✓
<input type="checkbox"/>	<b>WARNING:</b> Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.	✓	✓	✓	
<input type="checkbox"/>	<b>WARNING:</b> Liquids and other foods must not be heated in sealed containers since they are liable to explode.	✓		✓	✓
<input type="checkbox"/>	<b>WARNING:</b> Accessible parts may become hot during use. To avoid burns young children should be kept away.	✓		✓	

★	<b>WARNING:</b> Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container; To prevent this situation ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize. Stir during heating, if necessary, and ALWAYS stir after heating. In the event of scalding, follow these FIRST AID instructions: <ul style="list-style-type: none"> <li>Immerse the scalded area in cold water for at least 10 minutes.</li> <li>Cover with a clean, dry dressing.</li> <li>Do not apply any creams, oils or lotions.</li> </ul>	✓	✓	✓	✓
★	During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.	✓		✓	✓
★	<b>WARNING:</b> The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns;			✓	
★	The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.	✓	✓	✓	✓
★	This oven should be positioned proper direction and height permitting easy access to cavity and control area.	✓	✓	✓	✓
★	Before using the your oven first time, oven should be operated with the water during 10 minute and then used.	✓	✓	✓	✓
★	This microwave oven has to be positioned so that plug is accessible. If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.	✓	✓	✓	✓
<input type="checkbox"/>	During cleaning conditions the surfaces may get hotter than usual and children should be kept away (Cleaning function model only)		✓	✓	
<input type="checkbox"/>	Excess spillage must be removed before cleaning and utensils which state in cleaning manual can be left in the oven during cleaning. (Cleaning function model only)	✓	✓	✓	✓



★ Appliance should allow to disconnection of the appliance from the supply after installation. The disconnection may be achieved by having the plug accessible or by incorporating a switch in the fixed wiring in accordance with the wiring rules. (Built-in model only.)	✓	✓	✓	✓
---	---	---	---	---

<b>⚠ CAUTION</b>				
------------------	--	--	--	--

 
★ Only use utensils that are suitable for use in microwave ovens; DO NOT use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc. Remove wire twist ties from paper or plastic bags. Reason: Electric arcing or sparking may occur and may damage the oven.	✓		✓	✓
★ When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition;	✓		✓	
☐ Do not use your microwave oven to dry papers or clothes.	✓		✓	✓
★ Use shorter times for smaller amounts of food to prevent overheating and burning food.	✓		✓	✓
☐ If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames;	✓		✓	✓
★ The oven should be cleaned regularly and any food deposits removed;	✓	✓		✓
☐ Do not immerse the power cable or power plug in water and keep the power cable away from heat.	✓	✓		
☐ Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended; Also do not heat airtight or vacuum-sealed bottles, jars, containers, nuts in shells, tomatoes etc.			✓	✓

☐ Do not cover the ventilation slots with cloth or paper. They may catch fire as hot air escapes from the oven. The oven may also overheat and switch itself off automatically, and will remain off until it cools sufficiently.	✓		✓	
☐ Always use oven mitts when removing a dish from the oven to avoid unintentional burns.			✓	
☐ Do not touch heating elements or interior oven walls until the oven has cooled down.			✓	
★ Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.			✓	
★ Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.			✓	
☐ Do not operate the microwave oven when it is empty. The microwave oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the microwave oven is started accidentally.	✓			✓
☐ Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.	✓			✓
★ Install the oven in compliance with the clearances stated in this manual (see Installing Your Microwave Oven)	✓		✓	
★ Take care when connecting other electrical appliances to sockets near the oven.	✓	✓	✓	


## INSTALLING YOUR MICROWAVE OVEN

Place the oven on a flat level surface 85 cm above the floor. The surface should be strong enough to safely bear the weight of the oven.

1. When you install your oven, make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind and, on the sides of the oven and 20 cm (8 inches) of space above.

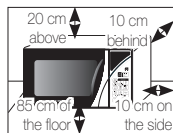

 2. Remove all packing materials inside the oven. Install the roller ring and turntable. Check that the turntable rotates freely.

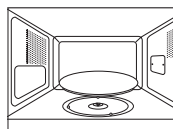

3. This microwave oven has to be positioned so that plug is accessible.

- ☐ If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent. For your personal safety, plug the cable into a 3-pin, 230 Volt, 50 Hz, AC earthed socket. If the power cable of this appliance is damaged, it must be replaced by a special cable.
- ☐ Do not install the microwave oven in hot or damp surroundings like next to a traditional oven or radiator. The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven. Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

## SETTING THE TIME

Your microwave oven has an inbuilt clock. When power is supplied, "12:00" is automatically displayed on the display. Please set the current time. The time can be displayed in either the 12-hour or 24-hour notation. You must set the clock:

- When you first install your microwave oven
- After a power failure

 
- ☐ Do not forget to reset the clock when you switch to and from summer and winter time.

1. To display the time in the...  
24-hour notation  
12-hour notation

Then press the  
**Clock** (🕒) button...  
Once  
Twice



2. Set the hour with the **h** button and the minutes with the **min** button.



3. When the right time is displayed, press the **Clock** (🕒) button again to start the clock.

**Result :** The time is displayed whenever you are not using the microwave oven.







## WHAT TO DO IF YOU ARE IN DOUBT OR HAVE A PROBLEM

If you have any of the problems listed below try the solutions given.

### This is normal.

- Condensation inside the oven.
- Air flow around the door and outer casing.
- Light reflection around the door and outer casing.
- Steam escaping from around the door or vents.

### The oven does not start when you press the **Start** (↻) button.

- Is the door completely closed?

### The food is not cooked at all.

- Have you set the timer correctly and/or pressed the **Start** (↻) button?
- Is the door closed?
- Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered?

### The food is either overcooked or undercooked.

- Was the appropriate cooking length set for the type of food?
- Was an appropriate power level chosen?

### Sparkling and cracking occur inside the oven (arcing).

- Have you used a dish with metal trimmings?
- Have you left a fork or other metal utensil inside the oven?
- Is aluminum foil too close to the inside walls?

### The oven causes interference with radios or televisions.

- Slight interference may be observed on televisions or radios when the oven is operating. This is normal. To solve this problem, install the oven away from televisions, radios and aerials.
- If interference is detected by the oven's microprocessor, the display may be reset. To solve this problem, disconnect the power plug and reconnect it. Reset the time.

✍ If the above guidelines do not enable you to solve the problem, contact your local dealer or SAMSUNG after-sales service.

## COOKING/REHEATING

The following procedure explains how to cook or reheat food.

ALWAYS check your cooking settings before leaving the oven unattended. First, place the food in the centre of the turntable and close the door.

1. Press the **Power Level** (ระดับความร้อน) button.

**Result :** The 850 W (maximum cooking power) indications are displayed:

Select the appropriate power level by pressing the **Power Level** (ระดับความร้อน) button again until the corresponding wattage is displayed. Refer to the power level table on the next page.



2. Set the cooking time by pressing the **10 min**, **1 min** and **10 s** button.

ช่วงเว 10 นาที 10 min	นาที 1 นาที 1 min	10 วินาที 10 s
-----------------------------	-------------------------	-------------------

3. Press the **Start** (↻) button.

**Result :** The oven light comes on and the turntable starts rotating. Cooking starts and when it has finished the oven beeps four times.



❏ **Never** switch the microwave oven on when it is empty.

✍ If you wish to heat a dish for a short period of time at maximum power (850 W), simply press the **+30s** button once for each 30 seconds of cooking time. The oven starts immediately.

## POWER LEVELS

You can choose among the power levels below.

Power level	Output
HIGH	850 W
MEDIUM HIGH	600 W
MEDIUM	450 W
MEDIUM LOW	300 W
DEFROST (❄️)	180 W
LOW	100 W

- ✍ If you select higher power level, the cooking time must be decreased. If you select lower power level, the cooking time must be increased.

## USING THE DEODORIZATION FEATURE

Use this feature after cooking odorous food or when there is a lot of smoke in the oven interior.

Press the **Deodorization** (🌀) button after you have finished cleaning. you will hear four beeps



- ✍ The deodorization time has been specified as 5 minutes. It increases by 30 seconds whenever the **+30s** button is pressed.

- ✍ The maximum deodorization time is 15 minutes.

## ADJUSTING THE COOKING TIME

You can increase the cooking time by pressing the **+30s** button once for each 30 seconds to be added.

Press the **+30s** button once for each 30 seconds to be added.

 
+30 วินาที  
+30s

## STOPPING THE COOKING

You can stop cooking at any time to check the food.

1. To stop temporarily;  
Open the door.

**Result :** Cooking stops. To resume cooking, close the door and press **Start** (▶) again.



2. To stop completely;  
Press the **Stop/Cancel** (⏏) button.

**Result :** The cooking stops.  
If you wish to cancel the cooking settings, press the **Stop/Cancel** (⏏) button.



- 🔊 You can cancel any setting before starting cooking by simply pressing **Stop/Cancel** (⏏) button.

## SETTING A STANDING TIME

The Hold Time can be used to set a standing time automatically (without microwave cooking).

1. Press the **Hold Timer** button.  
Open the door.

**Result :** The following indication is displayed :



2. Select the standing time by pressing the **10 min**, **1 min** and **10 s** button.



3. Press **Start** button.

**Result :** 1) The oven beeps four times.  
2) The current time is displayed again.

+30 วินาที  
+30s



## USING THE QUICK MEAL FEATURE

With the Quick meal feature, the cooking time is set automatically.  
First, place the food in the centre of the turntable and close the door.

1. Press the **Quick meal** button.



2. Select the type of food that you are cooking by pressing the **Quick meal** button. Refer to the table on the following page for a description of the various preprogrammed settings.



3. Press **Start** (↵) button.

### Result:

The food is cooked according to the preprogrammed setting selected.

- When cooking has finished, the oven will beep and flash "0" four times. The oven will then beep one time per minute.



## QUICK MEAL SETTINGS

The following table presents the various Quick meal Programmes, quantities, standing times and appropriate recommendations.

Code	Food	Serving size	Ingredients
1	Instant Noodle	670 g	minced pork - 100 g, egg - 1, any vegetables - 100 g, instant noodle - 1 bag, boiled water - 2 cups
			<b>Recommendations</b> 1.Put instant noodle, minced pork, vegetable and egg together and cook.
2	Frozen Shrimp Dumpling (kanom jeeb kung)	192 g (16/p)	Frozen Shrimp Bumping (kanom jeeb kung) - 192 g
			<b>Recommendations</b> 1.Cut the corner of the package and cook.

Code	Food	Serving size	Ingredients
3	Frozen Chinese Bun (salapao sai moo)	180 g (30/p)	Frozen Chinese Bun (salapao sai moo) - 180 g
			<b>Recommendations</b> 1.Cut the corner of the package and cook.
4	Frozen Wonton Shrimp (keaw kung)	250 g	Frozen Wonton Shrimp (keaw kung) - 250 g
			<b>Recommendations</b> 1.Remove the outer bag before reheating. 2.Pierce cover film for 3-4 time and cook.
5	Frozen Congee with Grouper Fish (kow tom pla kao)	350 g	Frozen Congee with Grouper Fish (kow tom pla kao) - 350 g
			<b>Recommendations</b> 1.Remove the outer seal before reheating. 2.Open the cover. Add water to fill line. 3.Cover lid loosely to let steam escape during heat and cook.
6	Frozen Spaghetti with Chicken Sauce	450 g	Frozen Spaghetti with Chicken sauce - 450 g
			<b>Recommendations</b> 1.Remove the outer bag before reheating. 2.Pierce cover film for 3-4 time and cook.

## USING THE RICE FEATURE

With the Rice feature, the cooking time is set automatically.  
First, place the food in the centre of the turntable and close the door.

1. Press the **Rice** button.



2. Select the type of food that you are cooking by pressing the **Rice** button. Refer to the table on the following page for a description of the various preprogrammed settings.



3. Press **Start** (▶) button.

### Result:

The food is cooked according to the preprogrammed setting selected.

- When cooking has finished, the oven will beep and flash "0" four times. The oven will then beep one time per minute.



## THE RICE SETTINGS

The following table presents the various Rice Programmes, quantities, standing times and appropriate recommendations.

Code	Food	Serving size	Ingredients
1	Rice	320 g	rice - 1 cup, water - 1 1/4 cup
			<b>Recommendations</b> 1.Put rice, water in a bowl and cover with the lid 2.Cook and keep the lid closed for another 15-20 minutes before serve
2	Brown Rice	350 g	brown rice - 1 cups, water for cooking - 2 cups, water for cleaned rice
			<b>Recommendations</b> 1.Put brown rice in a bowl, add water and cover with the lid. 2.Cook and wait for 10 mins ready to serve.

Code	Food	Serving size	Ingredients
3	Sticky Rice	350 - 400 g	sticky rice - 1 cup, water - 1/2 cup
			<b>Recommendations</b> 1.Put the sticky rice, add water in bowl and cover with the lid. 2.Cook and keep the lid closed for another 15-20 minutes before serve.
4	Pork Congee/ Porridge	600 - 750 g	cooked rice - 1 cup, water - 500 ml, pork chopped - 1/2 cup, pepper ground - 1 ts, soy suace - 1 tbs, oyster sauce - 1 tbs, spring onion, sliced celery, coriander - 1/2 cup
			<b>Recommendations</b> 1.Mix chopped pork with pepper, oyster sauce and make a small balls. 2.Put pork balls, cooked rice, water, then seasoning with seasoning powder pork flavor, stir well and cook. 3.Add the celery, spring onion, corianders before serve.
5	Spaghetti	220 g	spaghettis - 80 g, boiled water - 500 ml
			<b>Recommendations</b> 1.Add salt in water stir well, then add spaghetti and cook. 2.Drain and soak in cold water. Add a bit vegetable oil and stir.
6	Sweet Sticky Rice	410 g	cooked sticky rice - 1 cup, coconut milk - 1/3, salt - 1 ts, sugar - 1 tbs
			<b>Recommendations</b> 1.Mix coconut milk with sugar and salt stir and cook and wait for 1 mins. 2.Put the cooked sticky rice in the bowl. 3.Pour the coconut milk in bowl of sticky rice, stir well. Covered for 10 mins, then serve with ripe mango or custard.



## USING THE SOUP FEATURE

With the Soup feature, the cooking time is set automatically.  
First, place the food in the centre of the turntable and close the door.

1. Press the **Soup** button.



2. Select the type of food that you are cooking by pressing the **Soup** button. Refer to the table on the following page for a description of the various preprogrammed settings.



3. Press **Start** (▶) button.

### Result:

The food is cooked according to the preprogrammed setting selected.

- When cooking has finished, the oven will beep and flash "0" four times. The oven will then beep one time per minute.



## THE SOUP SETTINGS

The following table presents the various Soup Programmes, quantities, standing times and appropriate recommendations.

Code	Food	Serving size	Ingredients
1	Clear Broth Soup with Soft Tofu and Seaweed	850 g	chopped ground pork - 100 g, pepper - ¼ ts, spring onion - ¼ cup, chopped coriander - 1 tbs, water - 500 ml, fish sauce - 1 tbs, strips soft tofu - 2, dried seaweed - ¼ cup, oyster sauce - 1 tbs, pepper - 1 ts
<b>Recommendations</b>			
1. Marinated ground pork and pepper for 5 mins. 2. Put water, chopped pork, soft tofu, and cook. 3. Add spring onion, coriander, and pepper dried seaweed Ready to serve.			

Code	Food	Serving size	Ingredients
2	Tom Yum Soup with Shrimp	920 g	shrimp - 150 g, sliced galangal - 4 pieces, sliced kaffir - ¼ cup, lemongrass - 2, boiled water - 500 ml, mushroom - 1 cup, tomatoes - 4, chili paste - 1 tbs, evaporated milk - ¼ cup, fish sauce - 3 tbs, lime juice - 3 tbs, chilis - 10
<b>Recommendations</b>			
1. Put galangal, lemongrass, tear kaffir leave, tomato, tom yum khung paste in Boiled water wait for 2 mins. 2. Add shrimp, mushroom, chili, and cook. 3. Then add the evaporated milk seasoning with fish sauce, lime juice, chili paste then serve hot.			
3	Banana in Coconut Milk	500 - 600 g	sliced banana - 100 g, coconut milk - 150 ml, palm sugar - 3 tbs, water - 1 cup (240 ml), salt - ¼ ts
<b>Recommendations</b>			
1. Mixed coconut milk, water, palm sugar, and salt stir until dissolved. Then add sliced banana. 2. Cook.			

## USING THE THAI MENU FEATURE

With the Thai menu feature, the cooking time is set automatically. First, place the food in the centre of the turntable and close the door.

1. Press the **Thai menu** button.



2. Select the type of food that you are cooking by pressing the **Thai menu** button. Refer to the table on the following page for a description of the various preprogrammed settings.



3. Press **Start** (▶) button.

### Result:

The food is cooked according to the preprogrammed setting selected.

- When cooking has finished, the oven will beep and flash "0" four times. The oven will then beep one time per minute.



## THE THAI MENU SETTINGS

The following table presents the various Thai menu Programmes, quantities, standing times and appropriate recommendations.

Code	Food	Serving size	Ingredients
1	Steamed Egg (Egg custard)	400 - 450 g	fresh egg - 2, evaporated milk - 2 tbs, water - 3/4 cup, Japanese soy sauce - 1 ts, salt - 1/8 ts, kani crab - 1/4 cup, boiled shrimps - 4
<b>Recommendations</b>			
1.Put eggs in a bowl, beated then add evaporated milk, water and seasoning with Japanese soy sauce and salt mixed well.			
2.Cook and decorate with Kani crab and shrimp before serve.			

Code	Food	Serving size	Ingredients
2	Omelets	120 g	egg - 2, chopped tomato - 1 tbs, chopped onion - 1 tbs, soy sauce - 1/2 tbs, butter - 1 tbs
<b>Recommendations</b>			
1.Mix the beaten eggs, chopped tomato, chopped onion and soy sauce and stir well.			
2.Spread the butter on the plate, put the mixer on the plate and cook.			
3	Spaghetti Cream Sauce	450 - 500 g	onion - 1/4 cup, water - 1/2 cup, cooked ham - 1/2 cup, cooked spaghetti - 80 g, salted butter - 2 tbs, bay leaves - 3, plain four - 1 tbs, whipping cream - 100 ml, sliced mushroom - 1/2 cup, salt, pepper - 1/4 ts, mozzarellas cheese - 2 tbs
<b>Recommendations</b>			
1.Mix water and flour, then add butter, whipping cream, bay leave, chopped onion, ham, sliced mustroom seasoning with salt & pepper.			
2.Cook and add mozzarella cheese stir then serve with spaghetti.			
4	Spaghetti Meat ball	500 - 550 g	cooked spaghetti - 80 g, salt - 1/2 ts, minced meat - 200 g, black pepper - 1/2 ts, chopod onion - 1/4 cup, bay leave - 3, butter - 2 tbs, diced tomatoes - 1 cup, tomatoes sauce - 1/4 cup, water - 1/3 cup
<b>Recommendations</b>			
1.Mix minced meat with pepper and salt stir well make the ball.			
2.Mix the meat ball, butter, bay leave, and diced tomato, tomato sauce, chopod onion, water 3. Cook and serve with cooked spaghetti.			
5	Coconut Custard	130 g	duck eggs - 3, crane sugar - 1/2 cup, coconut milk - 1 cup, pandanus leaf - 2-3, small diced pumpkins - 1 cup
<b>Recommendations</b>			
1.Mixed egg and stir with squeezed pandanus leaf until have a smell of pandanus stir with the crane sugar. Fill out only the juice.			
2.Add the diced pumpkin and cook, then serve in room tempurate.			



## USING THE AUTO RAPID DEFROST FEATURE

The Auto Rapid Defrost feature enables you to defrost meat, poultry or fish. The defrost time and power level are set automatically.

 Use only dishes that are microwave-safe.

First, place the frozen food in the centre of the turntable and close the door.

1. Select the type of food that you are cooking by pressing the **Rapid Defrost** (\*\*) button one or more times. (Refer to the table on the opposite page for further details)



2. Select the food weight by pressing the **Up/Down** button. It is possible to set up to a maximum of 2000 g.




3. Press the **Start** (◇) button.



### Result :





- Defrosting begins.
- The oven beeps halfway through defrosting to remind you to turn the food over.
- Press **Start** (◇) button again to finish defrosting.

 You can also defrost food manually. To do so, select the microwave cooking/reheating function with a power level of 180 W. Refer to the section entitled "Cooking/Reheating" on page 9 for further details.

## AUTO RAPID DEFROST SETTINGS

The following table presents the various Auto Rapid Defrost programmes, quantities, standing times and appropriate recommendations.

Remove all kinds of package material before defrosting. Place meat, poultry, fish and fruit/berry on a ceramic plate.

Code/ Food	Portion	Standing time	Recommendations
1. Meat 	200- 2000 g	20-60 min.	Shield the edges with aluminium foil. Turn the meat over, when the oven beeps. This programme is suitable for beef, lamb, pork, steaks, chops, minced meat.
2. Poultry 	200- 2000 g	20-60 min.	Shield the leg and wing tips with aluminium foil. Turn the poultry over, when the oven beeps. This programme is suitable for whole chicken as well as for chicken portions.
3. Fish 	200- 2000 g	20-50 min.	Shield the tail of a whole fish with aluminium foil. Turn the fish over, when the oven beeps. This programme is suitable for whole fishes as well as for fish fillets.
4. Bread 	100- 1000 g	5-20 min.	Put bread on a piece of kitchen paper and turn over, as soon as the oven beeps. Place cake on a ceramic plate and if possible, turn over, as soon as the oven beeps. (Oven keeps operating and is stopped, when you open the door. This programme is suitable for all kinds of bread, sliced or whole, as well as for bread rolls and baguettes. Arrange bread rolls in a circle. This programme is suitable for all kinds of yeast cake, biscuit, cheese cake and puff pastry. It is not, suitable for short/crust pastry, fruit and cream cakes as well as for cake with chocolate topping.

## SWITCHING THE BEEPER OFF

 
You can switch the beeper off whenever you want.

1. Press the **Stop/Cancel** and **Start** buttons at the same time.

**Result :**

- The oven will not beep each time you press a button.

OFF




2. To switch the beeper back on, press the **Stop/Cancel** and **Start** buttons again at the same time.

**Result :**

 - The oven operates with the beeper on again.

ON



## SAFETY-LOCKING YOUR MICROWAVE OVEN

Your microwave oven is fitted with a special child lock programme, which enables the oven to be "locked" so that children or anyone unfamiliar with it cannot operate it accidentally.

The oven can be locked at any time.

1. Press the **Stop/Cancel** and **Clock** buttons at the same time.

**Result :**

- The oven is locked (no functions can be selected).

L



2. To unlock the oven, press the **Stop/Cancel** and **Clock** buttons again at the same time.

**Result :** The oven can be used normally.



## COOKWARE GUIDE

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used. Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry. The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-safe	Comments
<b>Aluminum foil</b>	✓ X	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
<b>Browning plate</b>	✓	Do not preheat for more than eight minutes.
<b>China and earthenware</b>	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
<b>Disposable polyester cardboard dishes</b>	✓	Some frozen foods are packaged in these dishes.
<b>Fast-food packaging</b>		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	X	May catch fire.
• Recycled paper or metal trims	X	May cause arcing.
<b>Glassware</b>		
• Oven-to-table ware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.





Cookware	Microwave-safe	Comments
<ul style="list-style-type: none"><li>Glass jars</li></ul>	✓	Must remove the lid. Suitable for warming only.
<b>Metal</b> <ul style="list-style-type: none"><li>Dishes</li><li>Freezer bag twist ties</li></ul>	 ✗ ✗	 May cause arcing or fire.
<b>Paper</b> <ul style="list-style-type: none"><li>Plates, cups, napkins and kitchen paper</li><li>Recycled paper</li></ul>	 ✓ ✗	 For short cooking times and warming. Also to absorb excess moisture. May cause arcing.
<b>Plastic</b> <ul style="list-style-type: none"><li>Containers</li><li>Cling film</li><li>Freezer bags</li></ul>	 ✓ ✓ ✓ ✗	 Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use melamine plastic. Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape. Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
<b>Wax or grease-proof paper</b>	✓	Can be used to retain moisture and prevent spattering.

✓ : Recommended


✓✗ : Use caution


✗ : Unsafe

## CLEANING YOUR MICROWAVE OVEN


The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:

- Inside and outside surfaces
- Door and door seals
- Turntable and roller rings

 Always ensure that the door seals are clean and the door closes properly.

 Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the of the appliance and possibly result in a hazardous situation.

1. Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.
2. Remove any splashes or stains on the inside surfaces or on the roller ring with a soapy cloth. Rinse and dry.
3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice on the turntable and heat for ten minutes at maximum power.
4. Wash the dishwasher-safe plate whenever necessary.

 **Do not** spill water in the vents. **Never** use any abrasive products or chemical solvents. Take particular care when cleaning the door seals to ensure that no particles:

- Accumulate
- Prevent the door from closing correctly




## STORING AND REPAIRING YOUR MICROWAVE OVEN

A few simple precautions should be taken when storing or having your microwave oven serviced.


The oven must not be used if the door or door seals are damaged:

- Broken hinge
- Deteriorated seals
- Distorted or bent oven casing

Only a qualified microwave service technician should perform repair.

 **Never** remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:

- Unplug it from the wall socket
- Contact the nearest after-sales service centre

 If you wish to store your oven away temporarily, choose a dry, dust-free place.

**Reason :** Dust and damp may adversely affect the working parts in the oven.

 This microwave oven is not intended for commercial use.

## TECHNICAL SPECIFICATIONS

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

<b>Model</b>	<b>MW83YD</b>
<b>Power source</b>	220 V ~ 50 Hz
<b>Power consumption</b> Microwave	1250 W
<b>Output power</b>	100 W / 850 W (IEC-705)
<b>Operating frequency</b>	2450 MHz
<b>Magnetron</b>	OM75P(31)
<b>Cooling method</b>	Cooling fan motor
<b>Dimensions (W x H x D)</b> Outside Oven cavity	489 x 275 x 371 mm 330 x 211 x 329 mm
<b>Volume</b>	23 liter
<b>Weight</b> Net	13.5 kg approx



**NOTE**

**NOTE**

ENGLISH



## QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300-362-603	<a href="http://www.samsung.com">www.samsung.com</a>
NEW ZEALAND	0800-SAMSUNG (0800-726-786)	
CHINA	400-810-5858	
HONG KONG	(852) 3698-4698	<a href="http://www.samsung.com/hk">www.samsung.com/hk</a> <a href="http://www.samsung.com/hk_en/">www.samsung.com/hk_en/</a>
INDIA	3030-8282 1800-3000-8282	<a href="http://www.samsung.com">www.samsung.com</a>
INDONESIA	0800-112-8888 021-5699-7777	
JAPAN	0120-327-527	
MALAYSIA	1800-88-9999	
PHILIPPINES	1-800-10-SAMSUNG (726-7864) 1-800-3-SAMSUNG (726-7864) 1-800-8-SAMSUNG (726-7864) 02-5805777	
SINGAPORE	1800-SAMSUNG(726-7864)	
THAILAND	1800-29-3232 02-689-3232	
TAIWAN	0800-329-999	
VIETNAM	1-800-588-889	

Code No.: DE68-03972A

